



MAVO EDGE 8K OPERATION MANUAL

For KineOS 7.1

MAVO Edge 8K INTRODUCTION

Kinefinity Inc. has been developing cinema cameras covering optical design to FPGA, circuits and software, with assistance from filmmakers, broadcasting industry and academic schools.

MAVO Edge 8K is a brand-new large-format 8K cine camera. With a whole-new carbon fiber camera body, MAVO Edge 8K is equipped with a stunning 8K 70P CMOS imaging sensor and cutting-edge image processing engine, which elevate the Kinefinity camera system to a whole new level. 8K 70fps, 6K 92fps and 4K 145fps can realize smooth post-production by direct recording with ProRes.

- Full frame 3:2 8K CMOS imaging sensor;
- **Dual native ISO:** 640/2560, low noise level and high latitude image at both settings;
- **ProRes:** In-camera ProRes recording at full resolution, in-camera oversampling 4K;
- **High frame rate:** Up to 92fps@6K 2.4:1, up to 145fps@4K 2.4:1;
- **Low rolling effect:** Fast CMOS imaging sensor readout speed, barely suffer any rolling shutter effect;
- **14+ stops with KineLOG3:** Preserve highlight and shadow perfectly, provide maximum room in post production;
- **KineMAG Nano:** Fully optimized NVMe-based M.2 SSD;
- **Custom LUT:** Support third-party 3D LUT in both shooting and post production;
- **KineMOUNT** (Interchangeable mounting system): Support PL/EF/Sony E/ARRI LPL Mount;
- **Video outputs:** Video port x2, 3G SDI port x2.

MAVO Edge 8K keeps the very compact and modular body and is compatible with many accessories such as KineMON monitor, KineEVF2 and other mounting adapters. Thanks to the advanced image process platform and low consumption design, the highly integrated camera is suitable for both one-man job and film crew. Besides, Apple ProRes codecs enable fluent post workflow. With professional ports, MAVO Edge 8K is a powerful cinema camera that offers amazing footage while supporting an effective post workflow.

FOR YOUR SAFETY

Before use, please read all instructions in this manual carefully:

- Pay attention to the **CAUTION** and **NOTICE**;
- Avoid near water use in case of water droplets splashing on the camera;
- Protect the camera from severe vibration;
- Avoid using the camera under direct sunlight; the operating temperature should be from 0 °C to 40°C ;
- Protect the camera from strong magnetic field, dirt, moisture, or lightning storm environments;
- Avoid condensation during transportation or transition;
- Never block the air intake/vent, or the camera will be damaged for the overheat ;
- Avoid exposing the LCD/OLED screen to harsh direct sunlight, and squeezing or hitting the monitor ;
- Only use accessories recommended by Kinefinity.

While using the camera, please:

- Turn off the camera when attaching or detaching a Lens Mount;
- Avoid touching the OLPF when attaching or detaching a lens mount, as the optical element is fragile;
- Make sure the EF lens is aligned pogo-pin contact inside of the EF mount;
- Hold the lens while detaching it from the lens mount, to prevent it from accident.

Contents


MAVO Edge 8K INTRODUCTION	2
FOR YOUR SAFETY	3
1. CAMERA OVERVIEW	6
1.1 Interfaces and Buttons	6
1.2 Functions of Buttons	8
1.3 Interface and Parameters	9
1.4 Default Settings	10
2. QUICK GUIDE	11
2.1 Power Supply	11
2.2 Mount	13
2.3 Lens	14
2.4 Monitoring	15
2.5 Recording Media SSD	19
2.5.1 Introducing KineMAG Nano	19
2.5.2 The Use of KineMAG Nano	20
2.6 Audio	21
2.7 e-ND	23
2.8 Playback	24
2.9 Codec	25
2.10 ProRes 4444 Efficiency Mode (beta)	26
2.11 Oversampling and Cropping Mode	27
2.12 Access clips on PC/MAC	28
3. SETTINGS AND ADVANCED OPERATIONS	30
3.1 Footage and Slate	30
3.2 SDI Monitoring	31
3.2.1 SDI Overlays	31
3.2.2 SDI LUT	31
3.2.3 SDI FPS:	31
3.3 Exposure and White Balance	32
3.3.1 Color Temperature List	32
3.3.2 Auto White Balance	32
3.3.3 Waveforms	33
3.3.4 Zebra Pattern	33
3.3.5 Digital Horizon	34
3.4 Slow-Mo and Quick-Mo	35
3.4.1 Two Types of FPS	35
3.4.2 User-defined CMOS Imaging Sensor FPS	35
3.5 Custom LUT	36
3.5.1 Upload Custom LUT	36
3.5.2 Erase Custom LUT	36
3.6 Firmware Update	37
3.7 Calibration Mode	38

3.7.1 Black Balancing	38
3.7.2 Update/Downgrade the Firmware	38
3.7.3 Digital Horizon Cal	39
3.8 TimeCode and SYNC	40
3.8.1 TC port and TC cord	40
3.8.2 External TC	41
3.8.3 Beeper and Tally	41
3.9 Configure the Camera	42
3.9.1 Preset	42
3.9.2 Shutter Display Mode	42
3.9.3 Camera Fan and Core Temperature	43
3.9.4 ISO/EI	44
3.10 Anamorphic Recording	45
3.11 Kinefinity App Instruction	46
4. TECH & SPEC AND CONNECTORS	48
4.1 Technical Specifications	48
4.1.1 MAVO Edge 8K SPEC	48
4.1.2 MAVO Edge 8K Frame Rates and FPS	50
4.2 Connectors	52
4.2.1 DC IN	52
4.2.2 RS	52
4.2.3 LENS	53
4.2.4 SYNC	53
4.2.5 TC	54
4.3 Mechanical Drawings	55
4.3.1 MAVO Edge 8K Body with KineMOUNT	55
4.3.2 MAVO Edge 8K Body with KineMOUNT and EF 3 Mounting Adapter	58
4.3.3 MAVO Edge 8K Body with KineMOUNT and E Mounting Adapter	61
4.3.4 MAVO Edge 8K Body with KineMOUNT and PL Mounting Adapter	64


1. CAMERA OVERVIEW

1.1 Interfaces and Buttons

The native mount is KineMOUNT, which works with mounting adapters to adapt different lenses.

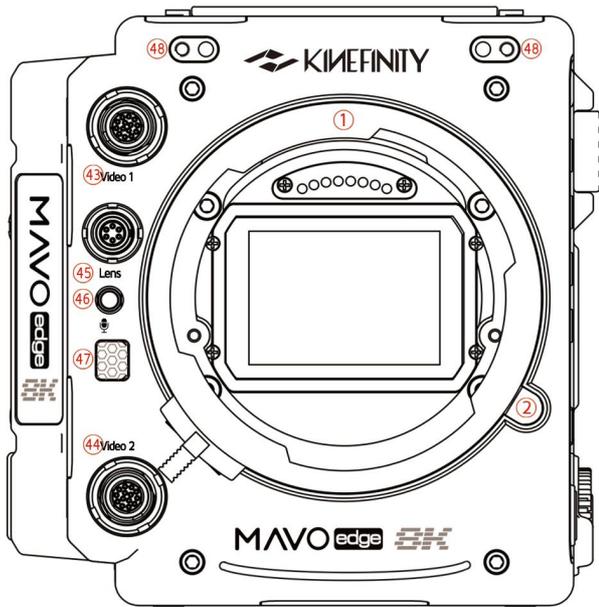


Camera Front (KineMOUNT)

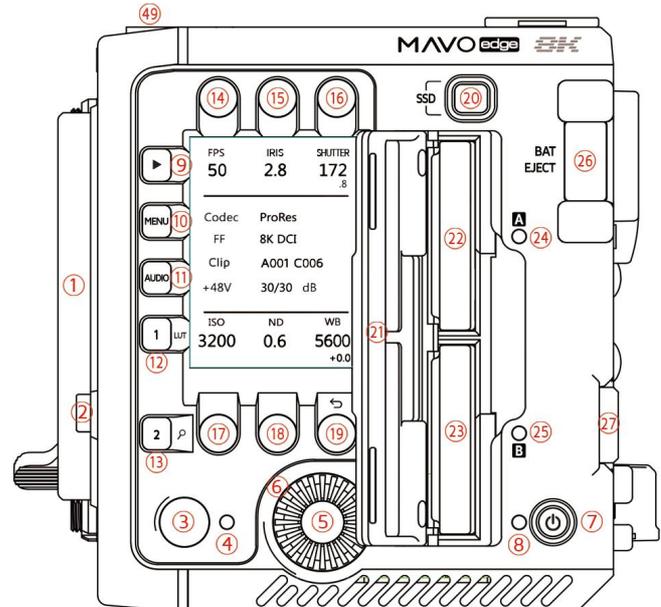


Camera Left (KineMOUNT)

#	Name	#	Name	#	Name
1	KineMOUNT	10	MENU Button	19	WB/Back Button
2	KineMOUNT Release Button	11	AUDIO Button	20	SSD Button
3	Record Button	12	LUT/Presets List	21	SSD Door
4	Tally	13	Zoom Button	22	SSD A
5	Knob Button	14	FPS	23	SSD B
6	Knob	15	Iris	24	SSD A Status LED
7	Power Button	16	Shutter	25	SSD B Status LED
8	Power/Camera Status LED	17	ISO	26	V-Mount Battery Release Button
9	Playback Mode	18	ND	27	BP-U Battery Release Button

CAUTION Never cover the air intake at the rear of the body and the air vent at top of the body when the camera is powered.

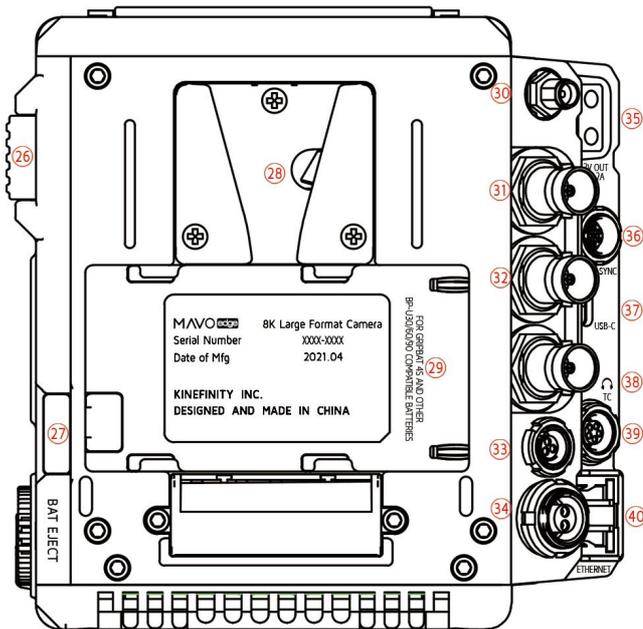

Camera Back

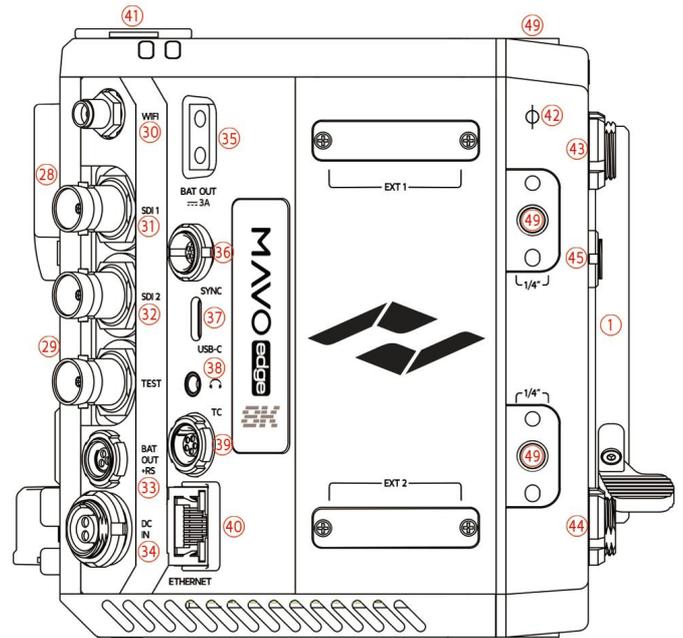

Camera Right (KineMOUNT)


#	Name	#	Name	#	Name
28	V-Lock Battery Mount	36	SYNC Port	44	Video Port 2
29	BP-U Compartment	37	USB-C Port	45	LENS Port
30	WiFi Antenna Port*	38	3.5mm Headphone Jack	46	3.5mm MIC Port
31	3G-SDI Port 1	39	TC Port	47	In-camera MIC
32	3G-SDI Port 2	40	ETHERNET Port	48	KineMON Mounting Holes (M3 x2)
33	RS Port	41	XLR Port x2	49	1/4" Mounting Hole
34	DC Power Input	42	Optical Indicator		
35	D-Tap Power Output	43	Video Port 1		

* The WiFi port is RP-SMA-K and the antenna is RP-SMA-J featured with 5dBi and supports WiFi frequency band.

For the definition of ports, please refer to [4.2 Connectors](#). SYNC and Video ports are proprietary.

1.2 Functions of Buttons

In Live View mode, use buttons and the knob to set the parameters; in Playback mode, use the knob and shortcut buttons [1] and [2] to quickly select and switch between clips.

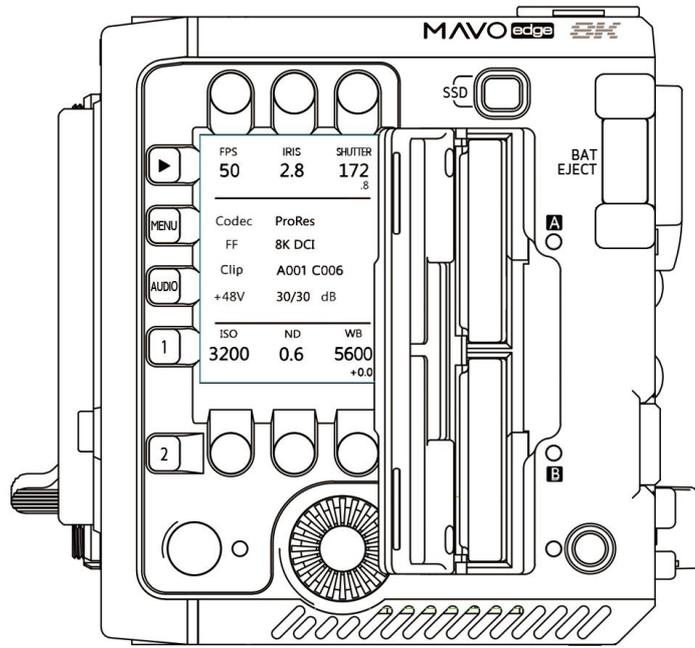

Operation	Rotation		Note
Knob Rotation	Set Iris or ND/Quick Select		In Playback mode, fast forward and fast reverse the clip by the knob.
Operation	Press	Press and Hold for 1 sec	Note
Knob Button	Waveform/Confirm Operation		
FPS	Set FPS	Shutter Fine-tuning	Shooting(CMOS imaging sensor) FPS
IRIS	Set Iris		<u>Support EF lenses in theWhitelist</u>
SHUTTER	Set Shutter	Shutter Fine-tuning	Shutter Angle or Speed
ISO	Set ISO/EI	Adjust ISO Highlight	
ND	Set ND (When ND is on)	Switch ND/Clear	Set ND value while ND is chosen
WB	Set Color Temp	Set Tint	Set complete list by menu
▶	Play/Pause (In Playback mode)	Playback/Live View mode	
MENU	System settings		
AUDIO	Gain Adjustment	Audio Setting	Set Audio by the knob
1	Switch LUT	Preset List	In Playback Mode, previous clip
2	Zoom		In Playback Mode, next clip
●	Record		Switch from Playback to Live View
⏻	Power on/off	Force Power-off (Hold for 5 secs)	
SSD	Choose KineMAG in Slot A/B		Slot A is with full speed and Slot B is with high speed.

1.3 Interface and Parameters

After booting up, the camera enters Live View mode: parameters of the current scene display on the screen.



#	Name	#	Name
1	CMOS Imaging Sensor FPS	18	Camera Index
2	Shutter Speed/Shutter Angle	19	USB Indicator
3	Exposure Mode	20	WIFI Indicator (When WIFI is connected)
4	ISO/EI ASA	21	CH1/2 Audio XLR Indicator
5	ISO Hightlight	22	CH3/4 BI/3.5mm MIC Indicator
6	Iris Number (If applicable)	23	CH1/2 VU Meter
7	ND Value (Only with ND on)	24	CH3/4 VU Meter
8	Color Temperature	25	Roll Number
9	Tint	26	Clip Number
10	Monitoring LUT	27/29	Record Indicator
11	Image Format	28/30	Digital Horizon
12	Record Resolution	31	SSD A/B Indicator
13	Codec	32	SSD A/B Status/Capacity
14	Real-time Power Voltage	33	Time Code
15	KineBAT Remaining Capacity	34	Waveform
16	UPS Indicator	35	Focal Length
17	Real-time Core Temperature	36	Focus Distance

NOTICE CMOS Imaging Sensor FPS is the actual capturing FPS of the CMOS imaging sensor; It can be adjusted by using FPS button and knob, or directly using the touch screen functions on KineMON-5U2 and KineMON-7U2 for quick adjustment.

Project FPS is the playback FPS of the footage in post-production, and can be set in [MENU]-[Recording]-[Project]-[Project FPS]

NOTICE EF Iris control is only for lenses on the White list; other lenses might not be recognized.

1.4 Default Settings

The list below features the default settings of MAVO Edge 8K:

Type	Name	Default Value	Type	Name	Default Value
RECORDING	Project FPS	25fps	AUDIO	Headphone Source	CH1/2
	Shutter Mode: Angle	1/50s		CH1 Phantom 48V	On
	ISO/EI	ISO 800		CH2 Phantom 48V	On
	WB Temperature	5600K		CH1/2 Record	CH1/2
	ND	Clear		CH3/4 Source	Built-in MIC
	LUT	KC_NEUTM		CH1 Level (48V)	30dB
	Default Codec	ProRes 4444		CH2 Level (48V)	30dB
	Image Format	FF		CH3/CH4 Level	30dB
	Rec Resolution	4K HD (3840x2160)		Headphone Volume	0dB
	Project FPS	25fps	SETTING	Save Preset List	1
	Next Reel#	001		Digital Horizon	On
	Camera Index	A		Clip End	Loop
	Camera Prefix	R		Playback at	×1
	Anamorphic Ratio	None		Tally Lamp	On
	TimeCode	Free Run		Beeper	On
	Sensitivity Mode	ISO Mode		Recording Beeper	On
	ISO Highlight Stops	6.0		Active Adapter	Enhanced
	SSD File System	HFS		Knob Ctrl	EF Iris
	SSD remain space	Time	ND tuning	0.03	
MONITORING	WB Temp List	Simple	SYSTEM	Power Threshold (V)	12V
	Blanking	None		Low Voltage Shutdown	On
	Zebra	None		Fan Speed	40%
	Waveform Based	LUT		Fan Control	Rec Low
	Waveform Size	Short		WiFi	Off
	Shutter Mode	Time		Stream	Off
	Zoom Ratio	100%: On		Bit Rate	Regular
	SDI Overlays	On		Language	English
	SDI LUT	KC_NEUTM			
	SDI FPS	25fps			

Restore to factory settings by:

[Menu→ SYSTEM→System Settings→Factory Reset]

NOTICE When the camera is powered with a USB storage device plugged in, it will automatically revert to factory settings while booting up.


NOTICE Before perform factory reset, user settings can be exported from the camera. After the reset is done, user settings can be imported to the camera.

[MENU→SYSTEM→ System Settings→Export/Import User Settings]

2. QUICK GUIDE


2.1 Power Supply

The MAVO Edge 8K allows different types of power supply:

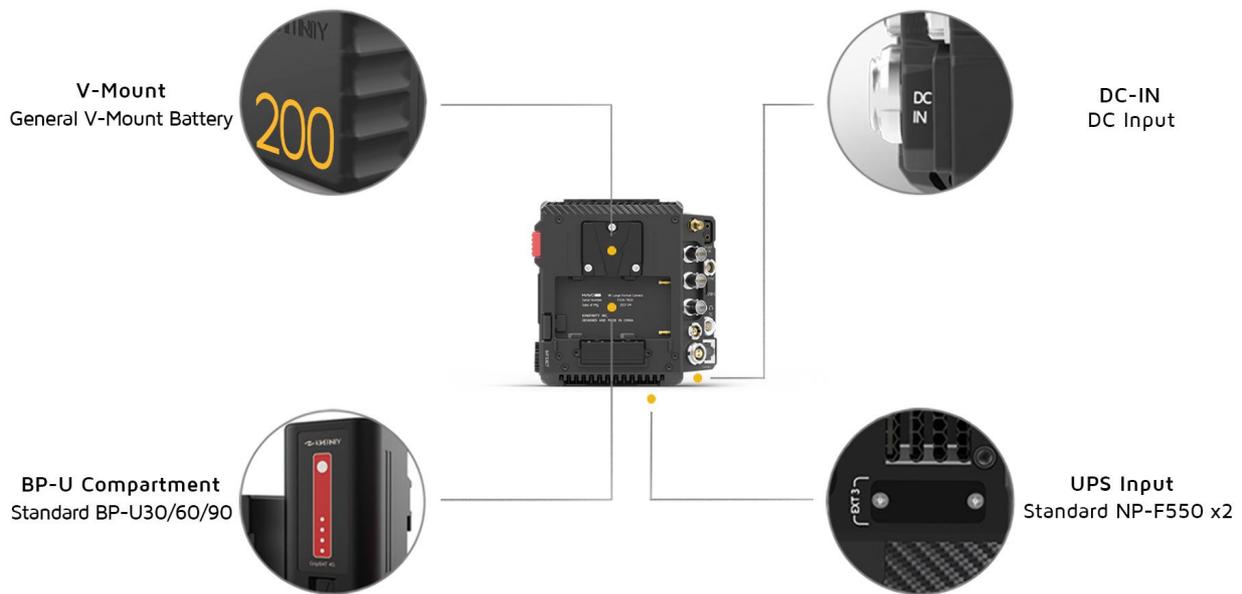

- **PD KineBAT 200** (Compatible with V-mount batteries) fits Edge V-Mount hybrid battery plate on the back. Single PD KineBAT 200 can power the camera for more than 5 hours.
- **GripBAT 4S** (Compatible with BP-U30) can be installed on the BP-U compartment on the back of MAVO Edge 8K. With a higher capacity up to 52Wh, the GripBAT 4S still enables a power supply about 60 mins even mounting KineMON-5U monitor on the camera.
- **GripBAT 2S:** Due to specialized UPS power contacts at the bottom of the camera, MAVO Edge 8K can be constantly powered by two NP-F550 batteries with the UPS Baseplate designed by Movcam. (Recommend using GripBAT 2S as its capacity is 75% higher than regular 2000mAh batteries in the market. It has high working current with long battery time.) No need to turn off the camera when replacing the battery.
- **Power Cords:** Connect different power cords to the 2-pin DC IN port of the camera body:

DC IN Definition

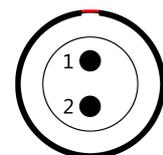

1. VDD
2. Ground

- **D-Tap Power Cord:** Connect the D-Tap plug to the D-Tap socket of battery/battery plate, and connect 2-pin push-pull connector to the 2-pin power socket of the camera body;
- **XLR Power Cord:** Connect the 4-pin standard XLR connector to the XLR socket on the storage battery (11~26V), and connect the 2-pin push-pull connector to the 2-pin power port on the camera body;
- **100W Power Cord:** Its output is a professional 2-pin push-pull connector, which matches the power sock of Kine Cameras; another port is USB-C with an E-Mark chip, which best matches 65W PD Power Adapter to power the camera easily.

CAUTION The voltage of power supply recommends as 11V~26V. Using a Power supply higher than 26V may burn the body.

CAUTION Please heed the direction of the 2-pin DC IN port on the camera body while plugging/unplugging the power cords. The red dot/notch indicates the direction in which the power cable is inserted. Please pay attention to the positive and negative poles of the D-Tap port.

NOTICE A V-mount to Anton-Bauer Plate Adapter is required if you use Anton-Bauer (Gold Mount) broadcast batteries.

NOTICE When two of the four power supplies are available at the same time, the camera automatically chooses the source with higher voltage, and allows hot-swap of batteries.

NOTICE To save power, use a different power supply for monitors and turn off WIFI.

NOTICE If the voltage detected is too low to continue shooting, the camera will automatically stop recording to avoid damage to the clip.

2.2 Mount

MAVO Edge 8K comes with a native KineMOUNT, which needs a mounting adapter to attach a lens to the camera. The available adapters include EF Mounting Adapter, EF Mounting Adapter with KineEnhancer, PL Mounting Adapter, SONY E Mounting Adapter, and also ARRI LPL Mounting Adapter.



EF Mount

PL Mount

LPL Mount

E Mount

There are only three steps to install mounting adapters to the KineMOUNT. Here we take EF adapter as an example. Turn off the camera and then:

1. **Release:** Keep pressing the KineMOUNT Release Button and rotate the locking ring of the KineMOUNT counter-clockwise, then take off the KineMOUNT cover;
2. **Install:** There is a positioning slot above the electronic contacts of the KineMOUNT, please align the arcuate protrusion on the adapter with the locating slot of KineMOUNT when attaching the mounting adapter to the camera;
3. **Lock:** Rotate the locking ring of KineMOUNT clockwise to fasten the adapter to KineMOUNT firmly.

Power on the camera after the adapter is mounted. Press [MENU] button and check the bottom of the menu. If it presents EF sys 10 (Or a different number), that means you have mounted the adapter successfully.

CAUTION Power off camera when swapping different adapters, else camera or adapters may get burned.

CAUTION As the FFD of KineMOUNT is very short, please don't try to attach any lens directly to KineMOUNT, except lenses tailored for KineMOUNT, or it will cause permanent damage to CMOS imaging sensor and OLPF.

NOTICE When installing the EF Mounting Adapter with KineEnhancer, please don't touch the optical glass. Any damage to the glass is irreversible, and the glass has to be replaced.

2.3 Lens

Based on active locking mount as EF Mounting Adapter II, the whole-new EF 3 Mounting Adapter is designed in accordance with the traditional DSLR lens rotation method and has been much improved. Compared to the previous version, EF 3 Mounting Adapter not only possesses the traditional way to rotate the lens clockwise, but also keeps active locking to fasten the lens, thus the EF lens can be installed quickly and locked clockwise as the PL lens, which is suitable for the utilization of Follow Focus when shooting.

Steps of attaching EF lens to new EF 3 mount:

1. **Unlock:** Rotate the locking ring of the EF 3 mount counterclockwise till stop; (Take off all the caps or covers from the camera and the lens mount);
2. **Install EF lens:** Align the red dot on the lens, the white line on the locking ring and the dot on the mount. And make sure that the pin on the mount matches the hole of the lens; rotate the EF lens clockwise till the release button up;
3. **Lock:** Rotate the locking ring of the EF 3 mount clockwise as the arrow direction until fastened firmly.

Steps of detaching EF lens from new EF 3 mount:

1. **Unlock:** Rotate the locking ring of the EF 3 mount counterclockwise till stop;
2. **Detach EF lens:** Fully press the release button on the right side of the EF 3 mount and rotate the EF lens counter-clockwise.

Steps to attach EF lenses by EF II adapter:


1. **Release:** Rotate the locking ring of the EF mount clockwise, take off the cover and the lens cover;
2. **Install:** Align the "red dot" on the lens with the "red dot" on the mounting adapter. Make sure that the pin on the mount engages with the hole in the mount of the lens. For the EF-S lens, align the white square on the lens with the one on the mount.
3. **Lock:** Rotate the locking ring (NOT the lens) counterclockwise (Follow the arrow of "lock sign" on the mount) until it is fastened firmly.

CAUTION The mounting adapter might be burned if a lens/adapter with all-metal rear end is attached directly to the camera body. In this case, please keep electronic iris control off:

[MENU→SETTINGS→ ADAPTER & ND→Active Adapter→Disable].

2.4 Monitoring

Please use a recommended EVF or field Monitor with Video port, 3G-SDI (Not HD-SDI) ports, and connect the input port of EVF or monitor to the output port of the camera body with a high quality cable.

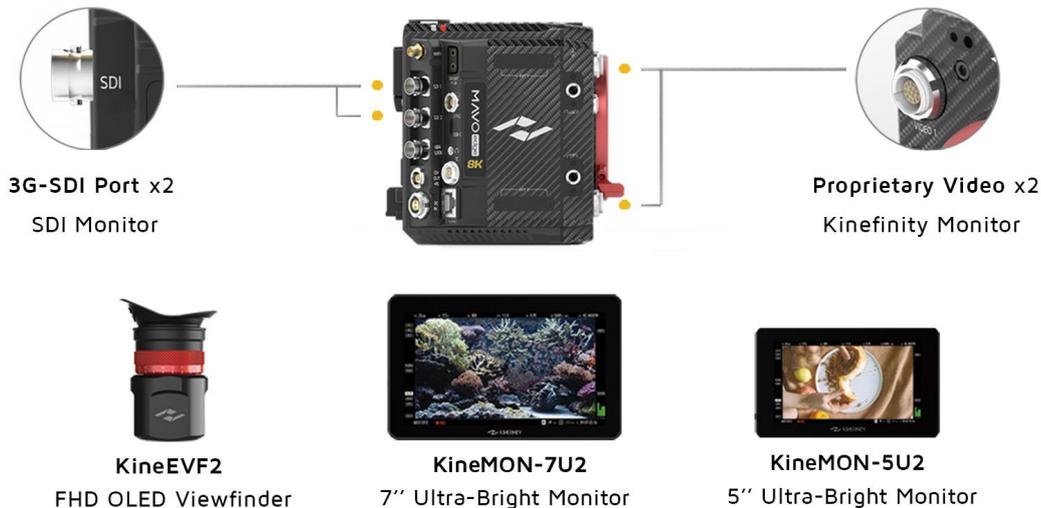

- **KineMON-5U2 Ultra-Bright Monitor:** With the Kine Video Cord, our monitor gets both power supply and video signal through the same cable. It is easy to mount it on the camera body firmly by using appropriate accessories for different needs.
- **KineMON-7U2 Ultra-Bright Monitor:** Use the same Kine Video Cord as KineMON-5U2 to get both power supply and video signal.
- **KineEVF2 Full-HD OLED Viewfinder:** Also use the Kine Video Cord for power supply and video signal, and could be mounted on the camera with the tailored KineEVF Bracket.
- **SDI monitor:** With 3G-SDI ports, monitoring by the director monitor or the DIT monitor.

With the KineMON-5U and KineMON-7U, the latency is lower than 100ms; with KineEVF, the latency is lower than 80ms.

CAUTION Connect the monitors to the camera by a SDI cable (75Ω) before they are turned on, and please also pay attention to the direction of the D-Tap cord.

Functions of Buttons on KineMON-5U2 and KineMON-7U2

With the touch screen function, the KineMON-5U2 and KineMON-7U2 are added with Tally light, Record button and Playback button to trigger corresponding functions on camera body.



Live View Mode

- **Power Button** : Push up or down Power button at the side to turn on or off the monitor. Tally light turns green after the camera boots up.
- **Record Button** : Short press the Record button to record/stop. Tally light turns red while recording.
- **Playback Button** :
 - **Menu:** Short press Playback button to enter the camera main menu;
 - **Playback:** Press and hold Playback button for three seconds to enter the playback mode.
- **Knob** :
 - **Waveform:** Short press Knob to show the waveform;
 - **Monitor brightness and monitor rotation:** Press and hold Knob for three seconds to tune monitor brightness and set monitor rotation. Rotating Wheel to change the brightness of monitor at 10% step while 60% brightness in default; the monitor can be set rotation 180 deg manually or auto rotation based on rotation angle of monitor itself.
- **Button 1** :
 - **RGB Histogram on input video:** Short press Button 1 to show histogram at the left corner of screen;
 - **False color on input video:** Press and hold Button 1 for three seconds to show false color which IRE based on ARRI False Color scale.
- **Button 2** :
 - **Zoom:** Short press Button 2 to zoom the Live View and to indicate the image focus;
 - **Peaking focus and peaking focus sensitivity:** Press and hold Button 2 for three seconds to enter peaking focus or peaking focus sensibility. Peaking focus shows peaking with red line, assisting cameraman on image focus, with the default being

Playback Mode :



In playback mode, all the buttons except for the Power Button are upgraded with new functions:

- **Record Button** : Short press Record Button to enter Live View mode.
- **Playback Button** :
 - **Play or pause**: Short press Playback Button to play or pause the current clip;
 - **Live View**: Press and hold Playback Button for three seconds to enter Live View mode.
- **Knob** :
 - **Speed or back**: Rotate Wheel to speed or back the current clip;
 - **Waveform**: Short press Knob to show the waveform;
 - **Monitor brightness and monitor rotation**: Press and hold the Wheel for three seconds to tune monitor brightness and set monitor rotation. Rotating Wheel to change the brightness of monitor at 10% step while 60% brightness in default; the monitor can be set rotation 180 deg manually or auto rotation based on rotation angle of monitor itself.
- **Button 1** :
 - **Previous clip**: Short press Button 1 to switch to the previous clip;
 - **False color on input video**: Press and hold the Button 1 for three seconds to show false color which IRE based on ARRI False Color scale.
- **Button 2** :
 - **Next clip**: Press Button 1 to switch to the next clip;
 - **Peaking focus and peaking focus sensitivity**: Press and hold the Button 2 for three seconds to enter peaking focus or peaking focus sensibility. Peaking focus shows peaking with red line or not, assisting cameraman on image focus, with the default being Normal.

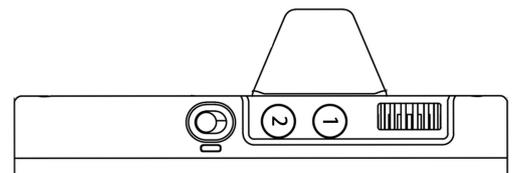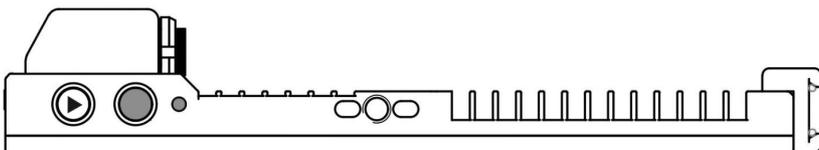

Function of Buttons on KineEVF2

- **Power Button:** Push up or down Power Button at the side to turn on or off the monitor. A LED indicator beside reflects the status of the monitor.
- **Record:** Short press the Record button to record/stop. The tally light turns red while recording.
- **Knob:**
 - Short press to adjust brightness of KineEVF. The default is medium brightness, scroll the Knob up and down to increase and decrease monitoring brightness,;
 - Press Wheel for three seconds to turn on/off Proximity Sensor.
- **Diopter Adjustment:** Set from -6 to +2 diopters to adapt the viewfinder image to your visual acuity (from 600 degrees of myopia to 200 degrees of hyperopia).
- **Button 1:**
 - **RGB Histogram:** Short press Button 1, display the histogram at the left corner of screen;
 - **False color on input video:** Long press Button 1 for three seconds to show false color which IRE based on Arri False Color scale.
- **Button 2:**
 - **Zoom:** Short press Button 2 to zoom the Live View;
 - **Peaking focus sensitivity:** Long press Button 2 for three seconds to enable setting of sensitivity of peaking function.

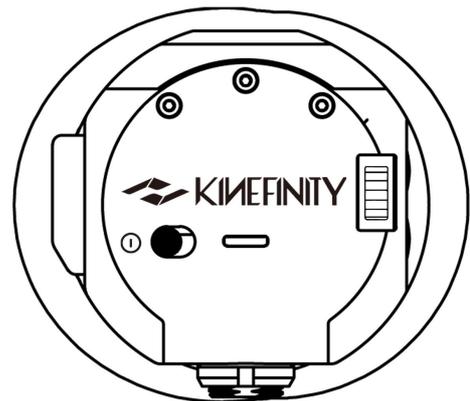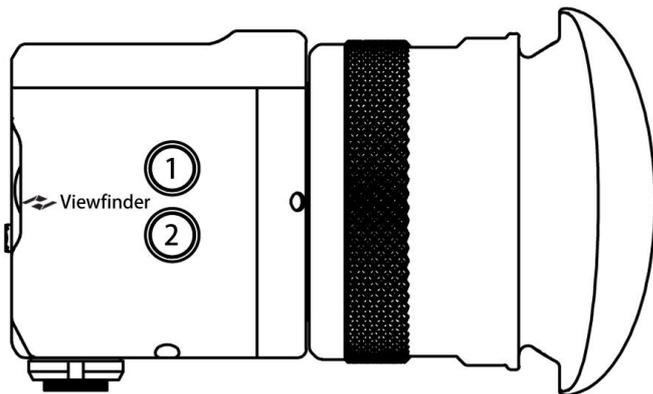


2.5 Recording Media SSD

Different from the previous Kinefinity cameras, the MAVO Edge 8K is designed to have dual-card slots internally, using a solid-state drive based on the NVMe M.2 interface, which is smaller in size and has a higher read and write speed.

2.5.1 Introducing KineMAG Nano

KineMAG Nano 1TB is composed of KineMAG Nano body and M.2 NVMe internal 2280 SSD, which has a read and write speed up to 10Gbps. The card body itself has two high-speed ports:

- **Camera port:** Designed for the dual PCIe 3.0 interface card slot of the MAVO Edge 8K camera;
- **Universal USB-C port:** The USB-C port supports the USB3.1 Gen2 protocol. No card reader is needed, and just one Type-C cable that supports USB3.1 Gen2 can quickly transfer the contents of the memory card to a Windows-based PC workstation/notebook or Mac. The card write can write at speeds of up to 10Gbps.

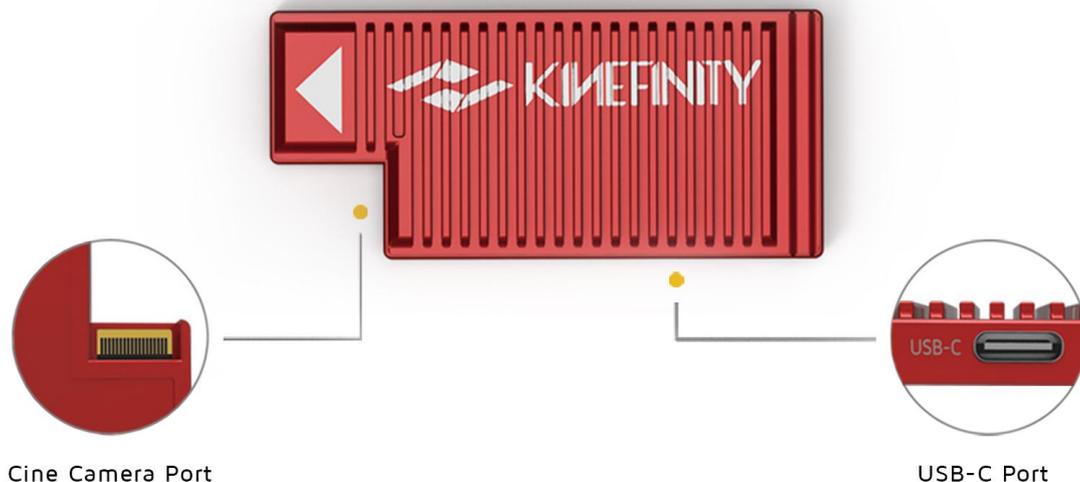

More importantly, the KineMAG Nano 1TB has a built-in specially optimized NVMe M.2 1TB SSD, which makes the KineMAG Nano 1TB have two major safety features: Read-only feature and RAID 5 redundancy, so that whether you are copying the card or the card being written at high speed in the camera, the safety and robustness of the memory card are greatly improved, and no need to worry about the card safety.

NOTICE MAVO Edge 8K features different write speeds in slot A and slot B. Slot A is with Full Speed and slot B is with High Speed. Remember to choose KineMAG Nano in slot A when you shoot 8K 30fps ProRes 4444 and above, or it will interrupt your shooting work.

2.5.2 The Use of KineMAG Nano

The use of KineMAG Nano is very simple. Open the SSD door and insert the KineMAG Nano 1TB SSD into the A or B card slot before powering on the camera; you can also insert two SSD cards at the same time. The SSD card slot is equipped with a built-in magnet door. Above the SSD card slot is the SSD function button, which has the function of managing the SSDs in the A and B slots; on the right side of the card slot are two SSD indicator lights for the upper slot A and lower slot B, which indicate the status of the SSD in the slot.

Status of SSD indicator (A, B):

- **Red:** KineMAG Nano in the slot is recording/playing;
- **Green:** KineMAG Nano in the slot is selected;
- **Orange:** KineMAG Nano in the slot is not selected;
- **Grey:** KineMAG Nano is not in the slot.

Using the SSD button on the camera to select the SSD A / SSD B to record / playback.

The monitor screen will show the SSD status:

- **Yellow [STBY]:** The SSD indicator is off, which means that there is no SSD in the slot, so the camera cannot record. Insert the SSD and reboot the camera;
- **Yellow [STBY]:** The SSD indicator is yellow, which means there is an SSD in the card slot but it is not displayed on the screen. The file system might be incorrect or the card data is faulty, you still can't shoot under this status. Please follow the following steps:
 - **The first step:** Ensure the data security of the card;
 - **The second step:** Format the SSD by [MENU→RECORDING→SSD→Format SSD]. After the SSD formatting is completed, the camera will automatically detect the SSD. Then, the SSD will display the remaining time, roll number and footage serial number of the selected card A/B.
- **Green [STBY]:** The SSD will display the remaining time and roll number of the selected card A/B. At this time, the SSD indicator of the relevant card is green, and you can shoot and the footage will be stored in the SSD.
- **Red [REC]:** The camera is recording. The indicator of the selected card A/B card is red at this time.

CAUTION Data can't be recovered after the SSD is rebuilt/formatted; please backup all data before formatting. Before confirm the operation, please check the SSD you format is SSD A or SSD B.

NOTICE Please insert the SSD before the camera is powered on, or the SSD will not be detected.

NOTICE We only recommend KineMAG Nano. The performances of a 3rd-party SSD are not guaranteed. We cannot provide technical support or help on recording issues such as frame drop or data loss for 3rd-party SSD.

NOTICE Please prepare backup SSD cards in case of emergency on set.

2.6 Audio

Compared with the previous Kinefinity cameras, MAVO Edge 8K integrates KineBACK-W functions such as the XLR port into the body. There are three audio recording interfaces that support four audio tracks recording at a time:

- **In-camera MIC (CH3/4):** Record audio by in-camera MIC even if there is no KineAudio or 3.5mm MIC;
- **3.5mm Plug-in-power port (CH3/4):** Suited for 3.5mm MIC;
- **KineAudio dual XLR ports with Phantom 48V (CH1/2):** KineAudio is a high-quality pre-amp audio module with Phantom 48V, and it also has dual XLR input, dual channel and supports 48V phantom microphone.

Adjust volume gain and set audio function by [AUDIO] button:

- Press [AUDIO] button: Set Gain size and headphone volume of CH1, CH2 and CH3/4;
- Press and hold [AUDIO] button for one sec:
 - **Headphone Source:** Choose CH1/2 or CH3/4 as the headphone source;
 - **Phantom 48V Input:** Choose CH1 or CH2 Phantom 48V input on/off;
 - **CH1/2 Record:** Choose to record CH1/2 at the same time or record CH1 or CH2;
 - **CH3/4 Source:** Choose CH3/4 as the source of in-camera MIC or 3.5mm MIC.

Audio input with In-camera MIC and 3.5mm MIC Port

- To use the In-camera MIC for audio recording, press and hold the [AUDIO] button for one sec, set [AUDIO Button→Headphone Source→CH3/4], then select [CH3/4 source→In-camera MIC]. The audio will be recorded by In-camera MIC.
- To use 3.5mm audio jack to connect an external microphone for audio recording, press and hold the [AUDIO] button for one sec, set [AUDIO Button→Headphone Source→CH3/4], then select [CH3/4 source→3.5MM]. The audio will be recorded by 3.5mm MIC.

Phantom 48V audio input

To use a microphone that needs phantom power, press and hold the [Audio] button for one sec, set [AUDIO→Headphone Source→CH1/2]

In addition, the channel can also be set in three modes:

- **Two audio channels as CH1:** Left Channel = Right Channel = CH1;
- **Two audio channels as CH2:** Right Channel = Left Channel = CH2 ;
- **Stereo:** Left Channel = CH1, Right Channel = CH2 (Default).

Generally, the camera audio can be set as one input if just using one MIC.

3.5mm Headphone Jack

To use a 3.5mm headphone for audio checking, the channel can be selected to CH1/2 or CH3/4 : Press and hold the [Audio] button for one sec, set

[AUDIO button→Headphone Source→CH1/2]

CAUTION When using microphones that don't need Phantom power, please turn off the Phantom 48V.

NOTICE The audio will be packed into mov file only when the project FPS is the same as CMOS imaging sensor FPS, or it will be recorded into a separate wav file. For example, if the project FPS is 25.000, when the CMOS imaging sensor FPS is set to 30.000, it will show yellow **30.000** on the UI in the beginning, which indicates the audio is recorded into a separate WAV file.

2.7 e-ND

MAVO Edge 8K incorporates with internal full-spectrum e-ND which is quite different from previous cameras.

E-ND is based on modern liquid crystal materials and optics controlled electronically, which is completely unlike conventional technology such as a rotating filter wheel or polarizing ND Filters. It covers a wide range from 0.6 to 2.4 (2 stops to 8 stops), and brings sharp images with color fidelity.

Seamless adjustment brings a very important feature: accurate exposure stop, which is what traditional glass ND filters don't have. You can also set the accuracy to one stop (0.3) for each rotation, but the default setting is seamless adjustment by 0.1 stop (0.03).

Menu Operation

Set e-ND

[MENU→SETTINGS→

Adapters & ND→

ND: 0.03/0.3]

The ND function is convenient to use:

- **Switch internal ND** : press and hold the [ND] button for one sec;
- **Set the ND value when the ND is on**: press the [ND] button and rotate the Knob, to set the ND value from 0.6 to 2.4 (2 stops to 8 stops).
- When the camera is mounted with cinema/manual lenses, using the Knob to set the ND value (default is Knob Control: Iris value)

[MENU→SETTINGS→Adapter & ND→Knob Control: e-ND]

In such way, the ND value can be set directly without pressing the [ND] button.

2.8 Playback

To enter the playback mode, you can press and hold the [Playback] button for one sec in Live View mode, and then you are able to trigger play/pause of the current clip by pressing the [Playback] button again.

Loop playback

The way to play a clip in a loop is to set by [MENU→SETTINGS→Playback→Clip End: Loop]. Playback continues from the beginning of the same clip again in accordance with project fps.

Clip switching

Press the shortcut button [1] to switch to the previous clip; press shortcut button [2] to switch to the next clip. Fast forward and fast reverse are available by the Knob. Please note the parameters in Playback mode are different from the ones in Live View Mode.

Playback speed

To change the playback speed in the menu, press [MENU→SETTINGS→Playback→Playback at: ×1]. There are seven speed choices: ×1/4, ×1/2, ×1, ×2, ×4, ×8, ×16.

Switch back to Live View mode

Press [REC] button or press and hold [Playback] button for one sec to switch back to Live View mode.

2.9 Codec

The camera comes with ProRes codecs, set the default codec by:

[MENU→RECORDING→Recording Codec→ProRes (.mov)]

MAVO Edge 8K supports in-camera ProRes recording at all resolution and fps: 8K/6K/5K/4K/2K even 4K Wide 100fps for 422 format. Besides ProRes422HQ, MAVO Edge 8K also supports ProRes4444XQ, 4444 and keeps all dynamic range of ProRes clips with KineLOG3, while the monitoring LUT will not be burned into the clips.

NOTICE The camera supports ProRes4444XQ recording to 8K up to 30fps, ProRes4444 to 8K up to 55fps.

Duration Reference

Settings	Duration @KineMAG Nano 1TB
4K@25fps ProRes422LT(.mov)	6 hours 51mins
4K@25fps ProRes422HQ(.mov)	2 hours 42mins
4K@25fps ProRes4444(.mov)	1 hour 48mins
5K@25fps ProRes422LT(.mov)	3 hours 44mins
5K@25fps ProRes422HQ(.mov)	1 hour 44mins
5K@25fps ProRes4444(.mov)	1 hour 09mins
6K@25fps ProRes422LT(.mov)	2 hour 36mins
6K@25fps ProRes422HQ(.mov)	1 hour 12 mins
6K@25fps ProRes4444(.mov)	48 mins
8K@25fps ProRes422LT(.mov)	1 hour 27 mins
8K@25fps ProRes422HQ(.mov)	40 mins
8K@25fps ProRes4444(.mov)	27 mins

2.10 ProRes 4444 Efficiency Mode (beta)

Efficient Mode is a high compression ratio mode developed by Kinefinity for ProRes4444/ProRes4444XQ encoding format, which maintains the high dynamic range and high visual fidelity of ProRes4444 while increasing the compression ratio by 50%, greatly saving SSD space.

The default setting is Regular Mode. Open Efficiency Mode by :

【MENU→System→Other settings→444 Size→Efficiency Mode (Beta) 】

A comparison of the recording duration in Efficiency Mode versus Regular Mode for the 444 format :

Codec	Duration (KineMAG Nano 1TB)			
	ProRes4444		ProRes4444XQ	
	Regular	Efficiency Mode	Regular	Efficiency Mode
4K@25fps	108 mins	216 mins	72 mins	144 mins
5K@25fps	69 mins	138 mins	46 mins	92 mins
6K@25fps	50 mins	100 mins	33 mins	66 mins
8K@25fps	27 mins	54 mins	18 mins	36 mins

NOTICE The ProRes 444 high-efficiency mode(Beta) is only for testing in the firmware KineOS 7.1 for Kinefinity cine cameras, and the recording format is NOT Apple-certified.

The footage quality of ProRes 444 high-efficiency mode(Beta) is not equivalent to Apple ProRes 4444 or Apple ProRes 4444XQ. Users should choose the recording format carefully and test it before using.

2.11 Oversampling and Cropping Mode

Oversampling/Downscale

Oversampling/Downscale: recording (Output) resolution is less than the actual sampling resolution by CMOS imaging sensor, while the image format of the recording is the same as the image format of sampling. As all effective area of the CMOS imaging sensor is used, there is lower noise level and sharper image.

Oversampling at FF is 4K. For most cases, downscaling 4K ProRes at FF is recommended.

Cropping Mode

Cropping means that the CMOS imaging sensor only utilizes a center part of the image as effective sampling area. **Cropping mode boosts frame rate higher than full resolution sampling:**

- Output 8K 2.4:1 full resolution sampling, up to 70fps;
- Cropping Mode, 5K 2.4:1 (S35), up to 108fps ;
- Cropping Mode, 4K 2.4:1 (M4/3), up to 145fps.

Oversampling + Cropping = infinity combination of resolution, fps and framing.

Select Cropping Mode by:

Press and hold shortcut button [1] or [MENU→RECORDING→Image Format]

2.12 Access clips on PC/MAC

Access KineMAG Nano on PC/MAC

To access Clips from KineMAG Nano on PC/MAC , a USB-C cable is used to connect SSD to the workstation:

- MAC platform (MacOS Sierra or higher version) can access KineMAG Nano with HFS/NTFS file format;
- Windows platform can access KineMAG Nano with NTFS file format. Windows platform installing software such as HFS+ or MacDrive can access HFS file format.

NOTICE Switch the film format via [MENU]→[RECORDING]→[SSD]→[SSD Film System]

NOTICE HFS for Read-only, NTFS can be read and written.

Play ProRes Clips on PC/MAC

All dynamic range of KineLOG3 ProRes clips is retained, and monitoring LUTs will not be burned into the clips. Therefore, LOG clips retain all of their dynamic range and color information. While playing the footage at a computer, using the LUT file that was used inside the camera will make the image look identical to the one while monitoring during the recording.

When using Windows you need to install [Quicktime7](#) to access ProRes MOV file.

Clip Folder

Each clip is saved in the SSD as a folder. The folder name is the same as the clip name, but no file extension, eg: folder A003C027_20210421_91B2 (for the meaning of the clip name, see [3.1 Footage and Projects Information](#)) includes:

- A003C027_20210421_91B2.mov: ProRes mov file
- A003C027_20210421_91B2-CH1.wav, A003C027_20210421_91B2-CH2.wav, A003C027_20210421_91B2-CH3.wav and A003C027_20210421_91B2-CH4.wav: are the uncompressed audio files of CH1, CH2, CH3 and CH4;
- *.cube and *.look: the LUT while monitoring, and the format is cube or look format;
- A003C027_20210421_91B2_snapshot.bmp: the snapshot of this clip, resolution 1/2x1/2;
- A003C027_20210421_91B2-slate.txt: contains most of the information when shooting the clip, like shutter speed, ISO, highlight, color temp, etc;
- 0.mt: internal camera information when recording.

Please send xxx-slate.txt and 0.mt to Kinefinity if clip files appear to be abnormal.

NOTICE If Project FPS is the same as CMOS Imaging Sensor FPS (Shooting FPS), audio is embedded into

ProRes mov file, else audio is not embedded into mov file. But the camera always records audio into four wav files at the same time, no matter slow-mo, quick-mo or regular speed.

NOTICE

When importing mov files into editing software, enter and search *.mov in the dialog box, all mov files will be listed automatically, then press CTRL+A / ⌘+A to select all mov files and drag them into your NLE.

3. SETTINGS AND ADVANCED OPERATIONS

3.1 Footage and Slate

When starting a new project, please make sure:

- **Project FPS:** the fps used by playback clips, editing clips or delivery matches up with the project FPS of the camera. For example: 24fps for feature movie and 25fps for TV (PAL). Project FPS should not be changed after the project kicks off;
- **Slate information:** set clip name, director's name, DoP's name, etc. of the project. You can find all the information in slate.txt.
- **Codec:** choose in-camera ProRes;
- **Project Blanking:** choose from 2.4:1, 2:1, 17:9, 16:9, 4:3 or Instagram ratio 1:1, also 9:16 and 1:2 for smartphone screens. Project Blanking is also applicable for anamorphic shooting.

Codec: based on the project and post workflow:

- **In-camera ProRes:** most of the projects can be recorded in ProRes 422HQ (Visually lossless), and in-camera oversampling to 4K ProRes with high image quality, efficiency and reliability.

Set the project and clip information, such as Project Name, DoP's Name, Roll Num., Take Num. and so on, in [MENU]

- Set Project FPS: [MENU→RECORDING→Project→Project FPS]
- Set Slate: [MENU→RECORDING→Project→Project & Slate]
- Set Blanking: [MENU→MONITORING→Monitoring Setting→Blanking]

Use the knob and the button [1]/[2] to change the information. All the information will be shown on the Slate and the SSD Roll Name, see the example on the right:

Before a new project, we suggest setting Scene Num., Roll Num. and Take Num. as "1". Then Roll Num. of the SSD card will be incremented by 1 each time of shooting after formatted in the camera, convenient for DIT backing-up clips. The roll number is changeable when formatting SSD.

NOTICE Project Blanking only acts as a reference for monitoring, the camera records the full active image.

Menu Operation

Change Project FPS

[MENU→RECORDING

→Project FPS]

Menu Operation

Set Project Information

[MENU→RECORDING→Slate]

Clip Name

A003C027_20210421_91B2

- A: Camera Index;
- 003: Take Num.;
- C: Abb. Of Clip;
- 027: Clip Num.;
- 20210421: Date;
- 91B2: Random numbers.

SSD Roll Name

A003_6D09B6

- A: Camera Index;
- 002: Roll Num.;
- 6D09: First Four Digits of Serial Number;
- B6: Random numbers.

3.2 SDI Monitoring

Edge 8K camera supports HD-SDI and 3G-SDI output, with transfer rates up to 1.485Gb/s @HD-SDI and 2.97Gb/s @3G-SDI. The output resolution is 1080P.

SDI supports pure SDI image output and overlay information SDI image output:

3.2.1 SDI Overlays

SDI output supports to output pure SDI image and SDI processed image with overlays:

- **Pure SDI image:** Pure SDI image output enables users to see the full-screen clean image without status overlays.
- **SDI Overlays:** When SDI overlays is switched on, camera parameters and MENU settings can be viewed and changed on the screen, through which users can be aware of the camera status while the real time shooting. The Record/Stop status display and the image blanking function are also added.

Menu Operation

Change SDI Overlays

[MENU→MONITORING→SDI→
SDI Overlays]

3.2.2 SDI LUT

The SDI output can burn separate SDI LUT into the image, which is independent of the setting LUT. Third party LUTs are also accepted for SDI output.(see 3.5 for details)

Menu Operation

Change SDI LUT

[MENU→MONITORING→S
DI→SDI LUT]

3.2.3 SDI FPS:

SDI FPS settings can be divided into Preset SDI FPS and following project FPS.

1. **Preset SDI FPS:** Currently Edge 8K supports SDI FPS of 24p, 25p, 30p, 50p and 60p. The camera output HD-SDI signal when the SDI FPS is 24p, 25p and 30p, and output 3G-SDI signal when the SDI FPS is 50p and 60p.
2. **Following Project FPS:** Under this option, the SDI FPS is equal to current project FPS when the project FPS is 24p, 25p, 30p, 50p or 60p, ; if the setting project FPS is other frame rates, the SDI FPS is the Preset SDI FPS that differs least from the current setting project FPS.

Menu Operation

Change SDI FPS

[MENU→MONITORING→S
DI→SDI FPS]

3.3 Exposure and White Balance

The color temperature is tuned by directly adjusting the RGB channels of the CMOS imaging sensor to change original RAW data, rather than apply a digital LUT. Although you can modify the white balance of RAW data or change color temperature by post processing, all the modifications are based on the data you shoot previously. In order to minimize the distortion in post processing, it is essential to gain as accurate color temperature as possible in the shooting stage.

3.3.1 Color Temperature List

The camera has two types of color temperature lists for white balance: Simple List and Complete List.

- **Simple List:** With typical color temperatures such as 2800K, 3200K, 4300K, 5500K, 5600K, 6400K and User WB. Among them, UserWB is user-defined value, automatically generated when do the Auto WB manually.
- **Complete List:** Complete color temperatures according to the portfolios of color temperatures (In accordance with the 100K for a step) and lighting types. You can simply choose the one to match with your shooting condition.

You can change color temperatures by the operation on the right.

Also, the Tint value can be changed by pressing and holding the shortcut button [WB] for one sec. When the number shows green, the Tint value is able to increase or decrease by rotating the wheel.

3.3.2 Auto White Balance

The Complete List of color temperatures meets the need for most cases. If the color temperatures listed in the built-in list are not enough to meet complex shooting lighting conditions, use a gray card or white card to conduct Auto WB to achieve a specific color temperature.

To conduct the Auto WB:

3. Put a gray/white card in front of the camera;
4. Make the gray/white card cover the whole display by zooming;
5. Choose: [MENU→Liveview→ Custom White Balance]

Menu Operation

Change Color Temperature List
[MENU→MONITORING→
Monitoring Setting
→WB Temp List]

Menu Operation

Auto WB
[MENU→MONITORING→
WB Auto]

The camera corrects the white balance parameters and writes the color temperature value to the UserWB. Once the UserWB is set, it can be used anytime later on.

3.3.3 Waveforms

Waveforms, zebra stripes and histogram help cinematographers determine the exposure of images. Waveform indicates the brightness of images over the horizontal direction, while histogram shows the statistical information on the brightness of the whole image.

The Waveform matches the images by default and shows the LUT NeutM. Waveform will change according to the different LUT. Waveform without LUT can also be checked by the menu operation.

You can choose different displays for waveforms:

- **LUT:** The waveform information displays the distribution of RGB, which bases on RAW data after the processing of monitoring LUT loaded.
- **LOG:** The waveform information display R/G/B three color channels distribution based on the RAW data with KineLOG.

You can also choose a short waveform or complete waveform on the screen.

NOTICE When over 100% on the waveform of LUT, images do not mean overexposure definitely. The images are sure to be overexposed only over clipping line on waveform with LOG.
When choosing to monitor the LUT, even if the waveform exceeds 100%, it may not be overexposed because the LUT is loaded.

NOTICE Use [Zoom] button to check the exposure. Other functions can be used normally when waveform is on.

The waveform remains when you use the [Zoom] button to check the exposure or use other functions.

3.3.4 Zebra Pattern

Zebra strip is a very straightforward feature to show the overexposed area in an image.

For Kine cameras, the zebra calculation is based on RAW data: RAW data is overexposed when the zebra stripes appears. So observe carefully to avoid unintentional over-exposure in most cases, as it will be pure white in the post workflow.

A threshold level can be set by pressing:

Menu Operation

Switch between different sources

[MENU→MONITORING
→Monitoring Setting
→Waveform Based]

Menu Operation

Switch Size

[MENU→MONITORING
→Monitoring Setting
→Waveform Size]

Menu Operation

Set Zebra Threshold

[MENU→MONITORING
→Monitoring Setting
→Zebra Pattern]

[MENU→MONITORING→Monitoring Setting→Zebra Pattern].

The default threshold level is 90%, which means the zebra strip will display when the light exceeds 90% of the maximum range.

3.3.5 Digital Horizon

With digital horizontal guidance on the UI, cameramen are able to judge the image level precisely and quickly when shooting with shoulder, in handheld and other motion works.

In-camera Digital Horizon calibration: after updating the firmware, the digital horizon should be calibrated in a horizontal place. The steps please refer to [3.6.3 Digital Horizon Cal.](#)

Menu Operation

Open Digital Horizon

[MENU→SETTINGS→

Digital Horizon: on]

3.4 Slow-Mo and Quick-Mo

3.4.1 Two Types of FPS

Sensor fps: The capturing fps of the CMOS imaging sensor. Shown on the up center of the UI as well as on the slate, it can be set with the shortcut button [FPS].

Project fps: The fps for clips playback, editing or delivery. You can choose one of them based on your need. For example: 24fps for movie and 25fps for TV release (PAL). To set the Project FPS: see the steps on the right.

When the Project fps is 25fps, whatever the CMOS imaging sensor fps is set, clips will be played at 25fps in post-production or in-camera playback. For example: action movies usually choose 22 Sensor fps for shooting, but 25 Project fps for playback, which makes the action seems faster.

The default setting of project fps is 25fps.

Shortcut List

Change Sensor FPS

Press short button [FPS]

Menu Operation

Change Project FPS

[MENU→RECORDING→

Project→Project FPS]

3.4.2 User-defined CMOS Imaging Sensor FPS

Regular fps, like 24, 25, 30, 48, 50, 96, 200, are available in the FPS Shortcut List; you may also customize other fps in the menu.

You can define three fps to any value between minimum fps (0.2fps) and the max fps of the current resolution w/ accuracy 0.001fps.

- When defining the CMOS imaging sensor FPS to 22fps, there will be a 22fps option in the CMOS imaging sensor shortcut list at any resolutions;
- When defining the CMOS imaging sensor FPS to 119fps, the 119fps option would not appear at S35 5K DCI resolution, but will appear in the Sensor fps menu at S35 5K 2.4:1 Wide resolution.

You can delete the customized Sensor fps by modifying it to 24 fps.

NOTICE When shoot slow-mo or fast-mo (CMOS Imaging Sensor FPS is different from Project FPS), the audio track will not be packaged into a mov file if the recording codec is ProRes mov, but instead two uncompressed audio files are in the clip folder.

Menu Operation

Custom Sensor FPS

[MENU→RECORDING

→Exposure & Customs

→Custom Sensor FPS]

3.5 Custom LUT

The camera supports custom LUT perfectly: from shooting to post-processing. There is one in-camera preset LUT: KC_NeutM. KC_NeutM has more accurate highlights and details in shadow than Kine709 and covers balanced tone with normal saturation and contrast.

You can upload a LUT to the camera, and switch different LUT/Look instantly when monitoring. While recording ProRes with custom LUT; it does not get burned into the footage. You can upload 3rd-party LUT to the camera as many as you want; supporting up to 33x33x33 3D LUT Cube, SCRATCH and DaVinci Resolve can output cube LUT.

3.5.1 Upload Custom LUT

It just needs three simple steps:

1. Export the LUT from DI software and rename it as four English characters, like CAN1.cube;
2. Copy the LUT into the root folder of the USB-C stick as exFAT/FAT32;
3. Upload the LUT to the camera: insert the USB stick to the USB-C port, and then load the Custom LUT with the menu. The process only takes one second.

Reboot the camera, and the new LUT will be shown in the LUT shortcut list by pressing the shortcut button [1].

NOTICE The LUT will be overwritten when the name is same, and there should be no blank in the name and not more than four characters.

3.5.2 Erase Custom LUT

Erasing the uploaded custom LUT is also intuitive,

[MENU→MONITORING→LUT→Delete Custom LUT]

Then all custom LUT will be deleted in a second, only with native KC_NeutM remained.

Menu Operation

Load Custom LUT

[MENU→MONITORING
→LUT→Import Custom LUT]

Menu Operation

Erase custom LUT

[MENU→MONITORING→
→LUT→Delete Custom LUT]

3.6 Firmware Update

Kinefinity always optimizes the current features and adds new functions to the cameras by firmware update. Users can download the latest firmware from Kinefinity website to get their cameras updated.

The firmware version is shown at the bottom of MENU, for example, firmware: KineOS V7.1(00), means the KineOS version is 7.1 with a building number of 7100. To upgrade the firmware as the following steps:

1. **Download:** Download and copy the latest firmware to the root folder of a FAT32 USB disk; insert the USB-C disk into the USB-C socket of the camera;
2. **Update:** Choose Update Firmware in the System menu, and then confirm to update. When the successful message appears on the display, it means the update is completed (approx. 30 mins);
3. **Reboot:** Power down the camera, and remove the USB-C disk. Repower the camera, then the new firmware will take effect.

Downgrading the firmware to the previous version is also available to perform, which is identical to the steps of firmware update.

CAUTION Do NOT take any other operation and never lose power firmware update, else it may lead to failure of the update, and the camera has to be sent to Kinefinity for repair, or you can to update the firmware under calibration mode, please refer to 3.7.2.Update/Downgrade the Firmware.

CAUTION Remove any lenses before updating the firmware.

NOTICE Before updating the firmware, the user settings can be exported from the camera. After the update is done, the user settings can be imported to the camera by:

[MENU→System→Export/Import User Settings]

Menu Operation

Update Firmware

[MENU→SYSTEM

→Update Firmware]

3.7 Calibration Mode

The camera can conduct the operations like black balancing, downgrading the firmware under this mode. Please reboot the camera after the foregoing operations are done.

3.7.1 Black Balancing

Every Kine camera has been calibrated in black balancing under Calibration Mode before shipping. After a long period of usage, please do the balancing again, and then reset to the factory. Factory reset would not change the balancing data. Please do as following:

- | | |
|---|---|
| <ol style="list-style-type: none"> 1. Enter into Calibration Mode: hold the [MENU] button for three seconds while turn on the camera, then release the [MENU] button; 2. Calibration: put on the lens cover or mount cover to make sure a total black display, then choose [Black Balancing] in the menu, and wait about 5mins until the calibration is done; 3. Factory Reset: by [MENU→SYSTEM→System Settings→Factory Reset], then reboot the camera. | <div style="background-color: black; color: yellow; padding: 2px;">Menu Operation</div> <p>Black Balancing
[MENU→CALIBRATION
→Black Balancing]</p> |
|---|---|

NOTICE After black balancing, there is no dead pixel in the normal ISO range, but there might be a few red/green/blue spots when ISO is extremely high.

NOTICE If there are white dots in some frames, it may due to the cosmic rays, not the malfunction of the CMOS imaging sensor.

3.7.2 Update/Downgrade the Firmware

If the camera is powered down during the firmware update, it may be not powered on because of damaged system. Please try to turn on the camera under Calibration Mode before send it to factory:

- | | |
|---|---|
| <ol style="list-style-type: none"> 1. Enter the Calibration Mode: hold the [MENU] button when press and release power button, after three seconds, release the [MENU] button; 2. Update: In the System menu, select Update Firmware, and then confirm to update. When the successful message appears on the display, it means the update is completed (approx. 30 mins); 3. Reboot: Power down the camera, and remove USB flash drive. Power on the camera, and then the new firmware takes effect. | <div style="background-color: black; color: yellow; padding: 2px;">Menu Operation</div> <p>Update Firmware
[MENU→SYSTEM→Update
Firmware]</p> |
|---|---|

NOTICE After the update is done, please perform the factory reset.

3.7.3 Digital Horizon Cal

After updating the firmware, the digital horizon should be calibrated in a horizontal place.

Please do as following:

1. **Enter into Calibration Mode:** hold the [MENU] button for three seconds while turn on the camera, then release the [MENU] button;
2. **Calibration:** place the camera in a horizontal position, enter the System menu to select CALIBRATION, and then confirm to Digital Horizon Cal and wait until the calibration is done;
3. **Factory Reset:** by [MENU→SYSTEM→System Settings→Factory Reset], then reboot the camera.

Menu Operation

Black Balancing

[MENU→CALIBRATION

→Digital Horizon Cal]

3.8 TimeCode and SYNC

Timecode is one of the key features of cinema camera. The camera shows time code in Live View and Playback state. Timecode is written into recorded clips. For ProRes, the mov file contains a single timecode track.

The camera enables three types of timecodes:

- **Free run:** timecode runs all the time, no matter you are recording or not. The timecode is embedded into recorded clips;
- **Record run:** timecode runs only when recording. We recommend to set timecode to 00: 00: 00: 00 when a new project begins;
- **External TC:** the camera can use timecode from an external device like Ambient NanoLockit as timecode of camera: using a special cable to connect a timecode generator to the TC port, then set timecode source as external in the menu.
- **Jam TC Sync:** The camera can set to Jam TC Sync mode that samples the time code value from external time code device like Ambient NanoLockit. The device can disconnect from the camera after jamming.

Menu Operation

Set the Time Code
 [MENU→RECORDING
 →Time Code
 →TC Mode/TC Start]

To choose or reset the timecode, please follow the operation on the right.


3.8.1 TC port and TC cord

The TC port is 0B 5-pin push-pull socket. It is compatible with the ARRI Alexa camera TC port for LTC IN and OUT.

Timecode generator based on Ambient timecode system, such as NanoLockit, is also a 0B 5-pin socket. You can check the TC cord on the Kinefinity official website or contact sales@kinefinity.com.

In addition, the camera can output timecode to other devices: connect the TC input port of the device to the TC output port of the camera by a special TC cord.

Port Definition

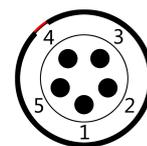

1. NC
2. NC
3. LTC IN
4. GND
5. LTC OUT

NOTICE When the camera is set to external timecode, the Jam TC input mode is not supported.

3.8.2 External TC

There are three kinds of frame rates when using external TC: Project FPS, Sensor FPS and External FPS of TC generator. Make sure that the Sensor FPS is an integral multiple of the External FPS.

Timecode on UI will be green if the system is successfully connected. If there is no external timecode feeding into the camera, it will automatically employ the internal timecode of the camera and the indicator shows in yellow. If the timecode blinks in green/red/yellow, you need to check if the following situations exist:

- Improper settings on the frame rates
- Poor cable connection;
- Power loss of external timecode device;
- Special settings needed for the timecode device. For example, NanoLockit TC output needs to be activated manually.

3.8.3 Beeper and Tally

The beeper has two usages:

- It makes a tone of 1KHz and 2KHz respectively when the camera is triggered on/off record, to give a signal to the crew in the field. You can disable the beeper by the operation on the right.
- The tone of 1KHz and 2KHz at the beginning of the video and end of the video can be recorded when the camera is triggered on/off record, as pilot for post-workflow. Disable the function by the operation on the right.

The Kinefinity camera has a built-in Tally light:

- The Tally light will either light up or not when shooting starts or stops. You can disable the Tally by the operation on the right.

Menu Operation

Set Beeper

[MENU→SETTINGS
→SYNC→Beeper: on/off]

Menu Operation

Set recording of Beeper

[MENU→SETTINGS
→SYNC→Rec Beeper: on/off]

Menu Operation

Set recording of Beeper

[MENU→SETTINGS→
→SYNC→Tally: on/off]

3.9 Configure the Camera

You can save these settings to the camera: preset list, body fan speed, EI/ISO mode, shutter mode, etc. When powered on with a USB-C disk, the camera will be restored to factory default.

3.9.1 Preset

In-Camera Presets are a set of parameters for recording and shooting:

Image Format; Resolution; Aspect; FPS; Shutter Speed; Record Format

Moreover, there are six in-camera presets, and the camera provides quick switch for these presets: in Live View mode, press and hold the button [1] for one sec to pop up the Preset list.

Besides, these in-camera presets can also be defined and saved. After setting these parameters in Live View state, you can save a Preset according to the operation on the right. Then the preset you save will be on the list.

Menu Operation

Change Presets

[MENU→SETTINGS

→Save Preset List]

NOTICE User settings can be exported or imported from the camera with the following steps:

[MENU→SYSTEM→System Settings→Export/Import User Settings]

3.9.2 Shutter Display Mode

There are two modes for shutter display: Shutter Speed and Shutter Angle:

[MENU→Liveview→Shutter Mode: Time/Angle]

Calculation between Speed and Angle as following: if Shutter Speed is 1/50s, and fps is 25, the shutter angle is:

$$25 \times 360 \times (1/50) = 180 \text{ Degree.}$$

The Shutter Angle ranges from 0.7~358 Degree; the Shutter Speed has min value of 1/2000, and the max value depends on the FPS.

Besides, Shutter Speed List does NOT match Shutter Angle List.

Set the appropriate Custom Shutter to avoid flickering:

NOTICE Set the appropriate Custom Shutter to avoid flickering with the following steps:

[MENU→RECORDING→Exposure & Custom→Custom Shutter].

Menu Operation

Change Shutter Display

[MENU→MONITORING

→Monitoring Setting

→Shutter Mode:Time/Angle]

3.9.3 Camera Fan and Core Temperature

Core Temperature is the real-time temperature of the core processor. It is shown on the UI with full parameters so that users can monitor it. When the core temperature reaches up to 75 degrees, the camera will be cooled down automatically by the fan at full speed until the core temperature is down to 70 degrees and under. Meanwhile, the fan speed will return to its normal setting.

You can adjust the fan speed (Default: 40%) from 25% to 100% or even turn off the fan by the operation on the right.

Besides, you can choose to slow down the fan while recording in case there will be less noise; the fan will be turned on automatically when the camera stops recording.

Manu Operation

Stop Fan

[MENU→

SYSTEM→BAT & Fan

→Fan Ctrl: Rec Low]

3.9.4 ISO/EI

EI/ISO is a group of settings to capture light on the CMOS imaging sensor. MAVO Edge 8K supports both ISO and EI mode, whose value display at the top of the screen.

ISO Mode

The nominal value of ISO is ISO ASA, which takes effect on the RAW data, applying different gain on the CMOS imaging sensor. The default mode is ISO mode, ISO 640; the highlight level (Highlight means stops from 18% gray to ADC Clip) is 5.0 stops.

Highlight Stops

As the name suggests, more highlight stops means less shadows details but more noise. If you want to retain more highlight details, recommend to set 5.0 stops and above or using EI mode. Changing ISO will not change highlight stop.

The highlight stop is able to change from 4.3 to 7.3 stops in the menu. For different highlight stops, the camera has a minimum ISO value, for example: when the highlight stop is 4.6, minimum ISO is 200; while for 5.0 stops, minimum ISO is 250.

Menu Operation

Set Highlight

[MENU→RECORDING
→Exposure & Custom
→ISO Highlight]

EI Mode

The nominal EI value is similar to the settings in traditional Cine Camera. The highlight stop follows the change of EI value, but image brightness adjusted by digital gain while analog gain of the CMOS imaging sensor remains unchanged. Changing EI will change highlight stop and image brightness, while sensitivity and dynamic range are unchanged. The highlight of EI 640 is 6.3 stops and EI 800 is 6.6 stops. You can switch between EI/ISO by the operation on the right.

Menu Operation

Change Sensitivity Mode
[MENU→RECORDING
→Exposure & Custom
→ Sensitivity Mode]

Difference between ISO and EI mode:

In ISO mode, changing the ISO value means using analog gain on the camera, which changes the sensitivity of CMOS imaging sensor, but the highlight stop remains unchanged.

In EI mode, changing the EI value doesn't change the sensitivity of the CMOS imaging sensor, but using digital gain on the camera changes highlight as a result.

NOTICE In Live View, 18% gray matches EI value to maintain the same brightness for shooting and post work.

NOTICE Recommend shooting in ISO mode if you don't fully understand the EI and ISO.

Dual ISO

Edge 8K supports Dual Native ISO: 640/2560, allowing it to capture low-noise image with high dynamic range in regular scenes or low-light environment. When highlight level is 5.0, ISO is from 250 to 640, and the native ISO is 640; when ISO is from 800 to higher, the native ISO is 2560. Under EI mode, EI is from 100 to 1000, and the native ISO is 640; when EI is from 1280 to higher, the native ISO is 2560.

3.10 Anamorphic Recording

Anamorphic was a technical choice for filming, but now it is an aesthetic preference. As more anamorphic lenses become available, MAVO Edge 6K, MAVO Edge 8K, MAVO LF, MAVO and TERRA 4K are good choices for anamorphic shooting, as the CMOS imaging sensors are all 3:2.

The 36x24mm full frame CMOS imaging sensor of MAVO Edge 8K is like a huge canvas, allowing creators to easily achieve various anamorphic shots on it:

- S35 anamorphic;
- Full frame anamorphic, obtaining a field of view equivalent to 65mm;
- Open Gate: 8192x5288. All pixels of the CMOS imaging sensor are captured, leaving maximum space for post processing.

The camera supports 2x, 1.8x, 1.75x, 1.5x, 1.33x, 1.25x, 0.5x, 0.67x anamorphic shooting, which falls into almost all anamorphic lenses on the market.

When use 2x anamorphic lens:

Format	Resolution	FPS	De-Squeezed
FF 8K 3:2, OG	8192x5288	45	16384x5288
S35 4:3 Ana	4864x3600	60	9728x3600
S35 6:5 Ana	4864x3840	60	9728x3840

Menu Operation

Set Anamorphic Lens

[MENU→RECORDING

→Project

→Anamorphic Ratio]

When shooting at 4:3 with anamorphic lens, you can de-squeeze the images on the monitor into normal image by setting anamorphic lens factor in MENU. For example, when anamorphic lens factor is 2, set the factor in camera to 2, then you can get 2.66:1 instead of normal view of 4:3.

To set the ratio, see the operation on the right.


NOTICE The recorded clips are 4:3 instead of de-squeezed images. The monitoring images depend on the ratio you set. You can see a normal image while monitoring, but the actual clips are still 4:3.

3.11 Kinefinity App Instruction

Kinefinity App which is re-designed thoroughly works with MAVO Edge 8K. The App can tune the shooting parameters or get the status of cinema cameras responsively. The brilliant thing is that the App displays the video stream from cameras in real time with super low latency, if the iOS devices and camera work in stable and good WIFI environment

Preparation before running Kinefinity APP:

1. Make sure a high-gain dual-band internal-pin Wi-Fi antenna is mounted to the camera (The WIFI port is manufactured with internal-pin and internal-bore; the antenna is SMA male pin and female head with 5dBi and supports WIFI frequency band);
2. The cinema camera works as WIFI Client mode, so it needs an external wireless AP (access point), which could be Android or iPhone12 hotspot (do not recommend iPhone 11 or below as hotspot for this application) or wireless router, dual band preferred.

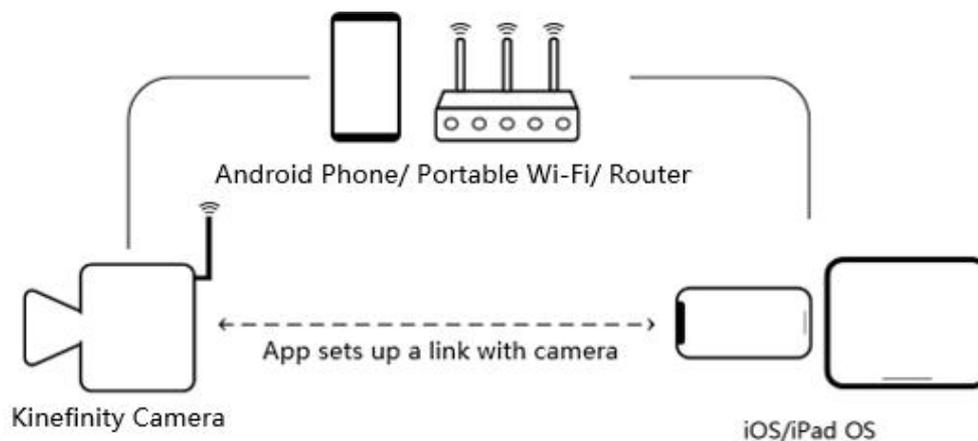

Take Android hotspot and iPad with Kinefinity App as the example:

1. **Set the camera:**

[MENU→SYSTEM→Network→WIFI: on]

[MENU→SYSTEM→Network→Stream: on]

2. **Prepare WIFI QR code:** Generate the code by [QR Code Generation website](#) or WIFI hotspot code by Android Phone;
3. **iPad access to WIFI:** Set iPad WIFI or use iOS camera to recognize the WIFI code to access to the WIFI;
4. **Camera access to WIFI by scanning the QR code:**

[MENU→SYSTEM→Network→Connect to Newwork...]

The camera scans the Wi-Fi QR code, obtains the SSID name and password, and connects to the Wi-Fi network; if it is successful, the camera accesses the Wi-Fi network and assigns an IP address;

5. **Set iPad App:** open Kinefinity App, click:

[Configuration icon on the UI→Set up→Camera Server→IP address]

Input IP address of the camera, then the App will automatically connect to the camera.

Then you are able to use three mode/pages :

1. **Video mode:** real-time video and key parameters. Users is capable of changing the key parameters by simply touching the UI;
2. **Panel mode:** key parameters only;
3. **Setup mode:** or menu/configuration mode. Input slate information and project information very easily.

NOTE

1. The performance of camera may be affected if number of active links is over six at the same time;
2. Kinefinity App is available to iPhone/iPad with iOS/iPad OS10 or above. But if as WIFI hotspot, strongly recommend iPhone 12 or above;
3. QR code from some Android Phones may not be recognized by the camera. In this way, please generate the code by:
QR code generation website: <https://qifi.org/>;
Operation: fill in the SSID and Key on the website and generate the QR code to use;
4. Kine cameras enables to record same WIFI information, no need to have extra setting in next time boot up;
5. The IP address of the camera depends on the WIFI. As the WIFI changes, the camera IP address will change.

4. TECH & SPEC AND CONNECTORS

4.1 Technical Specifications

4.1.1 MAVO Edge 8K SPEC

The following are typical settings.

Camera Type	Large Format Digital Cinema Camera		
Imaging Sensor	8K 3:2 Full Frame CMOS Imaging Sensor		Active Area: 36x24mm, \varnothing 43.3mm
Lens Mount	Native KineMOUNT as omni mount to be PL/EF/SONY E/ARRI LPL by solid mounting adapters		*PL *EF *SONY E *ARRI LPL
Dual Native ISO	Dual Base ISO		Max
	2560 (from 800)	640 (under 800)	16000
Dynamic Range	>14 stops		
Full Frame	FF 8K OG	8192x5288, 2~45fps	Active Area : 36x23.3mm, \varnothing 42.9mm
	FF 8K DCI	8192x4320, 2~55fps	Active Area : 36x19mm, \varnothing 40.7mm
	FF 8K 2.4:1	8192x3384, 2~70fps	Active Area : 36x14.9mm, \varnothing 39.0mm
	FF 8K UHD	7680x4320, 2~55fps	Active Area : 33.8x19mm, \varnothing 38.7mm
	FF 7.6K 2.4:1	7680x3200, 2~72fps	Active Area : 33.8x14.1mm, \varnothing 36.6mm
	FF 7.2K 3:2	7168x4760, 2~50fps	Active Area : 31.5x21mm, \varnothing 37.9mm
	FF 6.4K 4:3	6400x4760, 2~50fps	Active Area : 28.1x21mm, \varnothing 35.1mm
	FF 5.7K 6:5	5760x4760, 2~50fps	Active Area : 25.3x21mm, \varnothing 32.9mm
	FF 4.8K 3:2 (Oversample)	4864x3176, 2~50fps	Active Area : 31.5x21mm, \varnothing 37.9mm
	FF 4.2K 4:3 (Oversample)	4224x3176, 2~50fps	Active Area : 28.1x21mm, \varnothing 35.1mm
	FF 4K OG (Oversample)	4096x2644, 2~45fps	Active Area : 36x24mm, \varnothing 43.3mm
	FF 4K DCI (Oversample)	4096x2160, 2~55fps	Active Area : 36x19mm, \varnothing 40.7mm
	FF 4K 2.4:1 (Oversample)	4096x1692, 2~70fps	Active Area : 36x14.9mm, \varnothing 39.0mm
	FF 3.8K 6:5 (Oversample)	3840x3176, 2~50fps	Active Area : 25.3x21mm, \varnothing 32.9mm
	FF 4K UHD (Oversample)	3840x2160, 2~55fps	Active Area : 33.8x19mm, \varnothing 38.7mm
FF 3.8K 2.4:1 (Oversample)	3840x1600, 2~70fps	Active Area : 33.8x14.1mm, \varnothing 36.6mm	
S35	S35 6K 3:2	6144x3840, 2~60fps	Active Area : 27x16.8mm, \varnothing 31.8mm
	S35 6K DCI	6144x3240, 2~72fps	Active Area : 27x14.2mm, \varnothing 30.5mm
	S35 6K 2.4:1	6144x2560, 2~92fps	Active Area : 27x11.3mm, \varnothing 29.3mm
	S35 6K UHD	5760x3240, 2~72fps	Active Area : 25.2x14.2mm, \varnothing 29.0mm
	S35 5K 4:3	5120x3840, 2~60fps	Active Area : 22.5x16.9mm, \varnothing 28.1mm
	S35 5K DCI	5120x2700, 2~85fps	Active Area : 22.5x11.9mm, \varnothing 25.5mm
	S35 5K 2.4:1	5120x2160, 2~108fps	Active Area : 22.5x9.5mm, \varnothing 24.4mm

	S35 4.8K 6:5	4864x3840, 2~60fps	Active Area : 22.5x18mm, ø 28.8mm
	S35 4K 3:2 (Oversample)	4096x2560, 2~60fps	Active Area : 22.5x16.9mm, ø 28.1mm
	S35 4K DCI (Oversample)	4096x2160, 2~72fps	Active Area : 27x14.2mm, ø 30.5mm
	S35 4K UHD (Oversample)	3840x2160, 2~72fps	Active Area : 25.2x14.2mm, ø 29.0mm
	S35 3.8K 2.4:1 (Oversample)	3840x1600, 2~92fps	Active Area : 33.8x14.1mm, ø 36.6mm
	S35 3.4K 4:3 (Oversample)	3456x2560, 2~60fps	Active Area : 22.5x16.9mm, ø 28.1mm
	S35 3K 6:5 (Oversample)	3072x2560, 2~60fps	Active Area : 22.5x18mm, ø 28.8mm
Others	4K DCI	4096x2160, 2~108fps	
	4K 2.4:1	4096x1692, 2~130fps	
	4K UHD	3840x2160, 2~108fps	
	3.8K 2.4:1	3840x1600, 2~145fps	
	2K DCI	2048x1080, 2~215fps	
	2K 2.4:1	2048x800, 2~268fps	
	2K FHD	1920x1080, 2~215fps	
	1.9K 2.4:1	1920x800, 2~286fps	
Record Codec	Codec Type	Encapsulation Format	Bit Depth
	ProRes4444XQ	Quicktime mov	12bits
	ProRes4444	Quicktime mov	12bits
	ProRes422HQ/422/LT	Quicktime mov	10bits
Shutter Angle	0.7°~358° Rolling Shutter		
Monitoring	Video Port x2	SDI Port x2	
SYNC	Tally, AutoSlate, Beeper, TC, 3D/Multi-cam Sync		
LUT	Preset: KineLOG3, Neutral(Rec 709), Support Custom 3D LUT		
Audio Capture	In-cam MIC; 3.5mm MIC-IN; 48V Phantom Power Input x2 (regular XLR)		
Record Media	Media Slot x2, for KineMAG Nano SSD based on NVMe M.2		
Power Source	Power in	Consumption	
	DC IN (1B2P), 11~26V/Integrated V-mount battery plate	32W	8K 25p under the Liveview, 32W
Body Material	Carbon Fiber with Aluminum Alloy		
Body Weight	3.3lb/1.5kg		*Only camera body
Size	4.1x4.8x4.3"/106x124x109 mm		*W/O projections, WxHxL
Operating Temp	0°C ~ 40°C		

All specifications shown are preliminary and subject to change without notice.

4.1.2 MAVO Edge 8K Frame Rates and FPS

The following chart contains resolution, frame rate and codecs. For the latest complete list, please refer to SPEC of MAVO Edge 8K on the website.

Image Format	Format	Resolution	Max FPS	Codec
FF	FF 8K OG	8192x5288	45	ProRes
	FF 8K DCI	8192x4320	55	ProRes
	FF 8K 2.4:1	8192x3384	70	ProRes
	FF 8K UHD	7680x4320	55	ProRes
	FF 7.6K 2.4:1	7680x3200	72	ProRes
	FF 7.2K 3:2	7168x4760	50	ProRes
	FF 6.4K 4:3	6400x4760	50	ProRes
	FF 5.7K 6:5	5760x4760	50	ProRes
	FF 4.8K 3:2 (Oversample)	4864x3176	50	ProRes
	FF 4.2K 4:3 (Oversample)	4224x3176	50	ProRes
	FF 4K OG (Oversample)	4096x2644	45	ProRes
	FF 4K DCI (Oversample)	4096x2160	55	ProRes
	FF 4K 2.4:1 (Oversample)	4096x1692	70	ProRes
	FF 3.8K 6:5 (Oversample)	3840x3176	50	ProRes
	FF 4K UHD (Oversample)	3840x2160	55	ProRes
	FF 3.8K 2.4:1 (Oversample)	3840x1600	70	ProRes
S35	S35 6K 3:2	6144x3840	60	ProRes
	S35 6K DCI	6144x3240	72	ProRes
	S35 6K 2.4:1	6144x2560	92	ProRes
	S35 6K UHD	5760x3240	72	ProRes
	S35 5K 4:3	5120x3840	60	ProRes
	S35 5K DCI	5120x2700	85	ProRes
	S35 5K 2.4:1	5120x2160	108	ProRes
	S35 4.8K 6:5	4864x3840	60	ProRes
	S35 4K 3:2	4096x2560	60	ProRes
	S35 4K DCI (Oversample)	4096x2160	72	ProRes
	S35 4K UHD (Oversample)	3840x2160	72	ProRes
	S35 3.8K 2.4:1 (Oversample)	3840x1600	92	ProRes
	S35 3.4K 4:3 (Oversample)	3456x2560	60	ProRes
	S35 3K 6:5 (Oversample)	3072x2560	60	ProRes
Other Cropping	4K DCI	4096x2160	108	ProRes
	4K 2.4:1	4096x1692	130	ProRes
	4K UHD	3840x2160	108	ProRes
	4K 3.8K 2.4:1	3840x1600	145	ProRes
	2K DCI	2048x1080	215	ProRes
	2K 2.4:1	2048x800	268	ProRes
	2K FHD	1920x1080	215	ProRes
	1.9K 2.4:1	1920x800	286	ProRes

NOTICE The oversampling images are sharper and have less noise.

NOTICE Any frame rate can be defined between the minimum fps (0.2fps, with the current firmware) and the maximum CMOS imaging sensor fps of the current resolution, with an accuracy of 0.001fps.

NOTICE ProRes4444XQ is up to 8K 30fps; ProRes4444 is up to 8K 55fps.

4.2 Connectors

MAVO Edge 8K brings multiple ports:


- Universal ports:** video output (SDI), phantom 48V power input (Standard XLR port), audio input (3.5mm stereo MIC), audio output (3.5mm stereo headphone), USB-C port, power output (D-Tap), GENLOCK port, ETHERNET (RJ45) port.
- Proprietary ports:** power input (DC IN), LENS port, SYNC port, TC input and output (TC), video output (Video), high speed extension (EXT1&EXT2), bottom UPS power (EXT3), record trigger (RS).

4.2.1 DC IN

DC IN is located at the back right of the camera body, a 1B 2-pin push-pull socket. The recommended input voltage of DC is 11V~26V. Please notice the following for a stable workflow:

- Max current of external power is 5A;
- Max consumption of camera body is 32W;
- Max consumption of camera body with KineMON-5U is 38W.

NOTICE Red dot and groove on the socket should match pin #1.

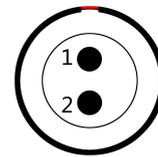


#	Definition
1	VDD
2	GND

4.2.2 RS

RS is a 3-pin Fischer push-pull connector for run/stop trigger on MAVO Edge 8K.

- Pin 2: VBAT output is equal to camera body power input (voltage as 11V~26V), max current up to 3A.
- Pin 3: Record on/off input signal, input voltage up to 3.3V.
- Shorten pin #3 and pin #1 can trigger on/off.

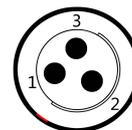


#	Definition
1	GND
2	VBAT
3	RS

NOTICE A combined power output of RS connector and VBAT on D-Tap is not over 3A.

NOTICE The input voltage of RS connector cannot exceed 3.3V. Otherwise the camera will be damaged and be sent to the factory.

4.2.3 LENS

The control port (LENS) is located at the front of the camera body, a 0B 6-pin push-pull socket.

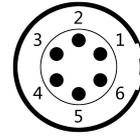

- Pin 1: Record on/off input signal, input voltage up to 3.3V.
- Pin 3 and pin 4: standard voltage of RS232 connector (-15V~+15V).
- Pin 6: VBAT output is equal to camera body power input (voltage as 11V~26V), max current up to 3A.


#	Definition
1	RS
2	DET
3	RS232 TX
4	RS232 RX
5	GND
6	VBAT

NOTICE The VBAT is only available on compatible accessories. Please confirm with Kinefinity when you use this port or customize third-party accessories.

NOTICE The input voltage of RS connector cannot exceed 3.3V. Otherwise the camera will be damaged and sent to the factory.

4.2.4 SYNC

SYNC is a 0B7-pin push-pull socket on MAVO Edge 8K.

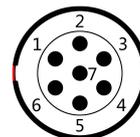


- Pin 1 and Pin 7: Voltage range, 0~3.3V.
- Pin 2 and Pin 3: standard voltage of RS232 connector, -15V~+15V.
- Pin 5: Voltage output range, 0~3.3V.

#	Definition
1	CAN_L
2	RS232_RX
3	RS232_TX
4	Reserved
5	TALLY
6	GND
7	CAN_H

提示 The VBAT is only available on compatible accessories. Please confirm with Kinefinity when you use this port or customize third-party accessories.

4.2.5 TC

The TC port is a 0B 5-pin push-pull socket for timecode input or output. For different timecode generators, such as Ambient timecode generator Nano Lockit, or SoundDevice recorder which has a TC system, the physical spec and definition are the same.

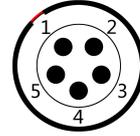


#	Definition
1	NC, unused
2	NC, unused
3	LTC IN
4	GND
5	LTC OUT

4.3 Mechanical Drawings

4.3.1 MAVO Edge 8K Body with KineMOUNT


Front View

Dimensions are shown in mm.

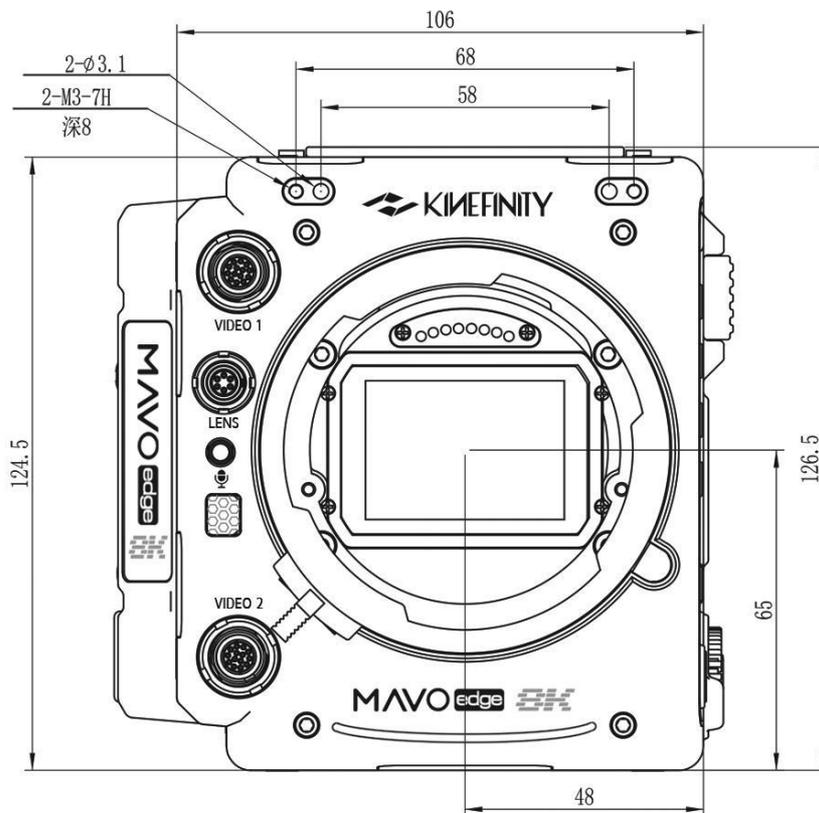

Top View


Dimensions are shown in mm.

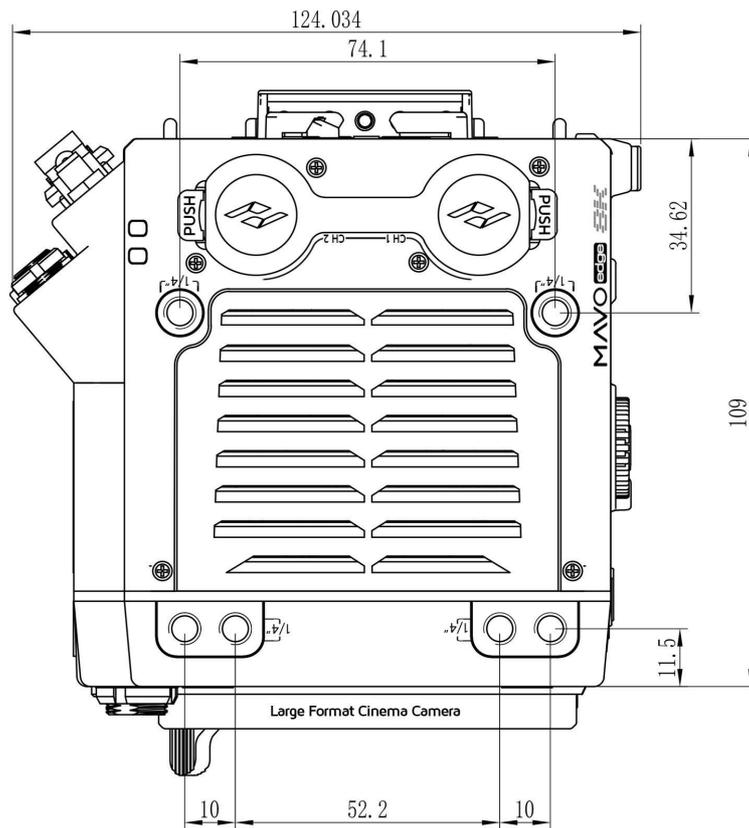

4.3.2 MAVO Edge 8K Body with KineMOUNT and EF 3 Mounting Adapter


Front View

Dimensions are shown in mm.

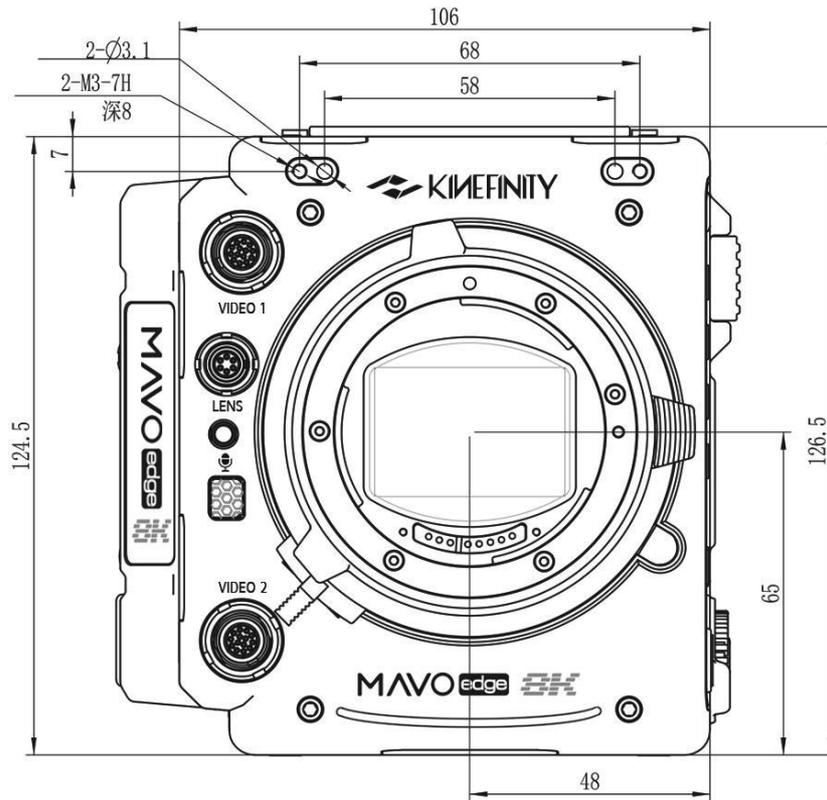

Top View


Dimensions are shown in mm.

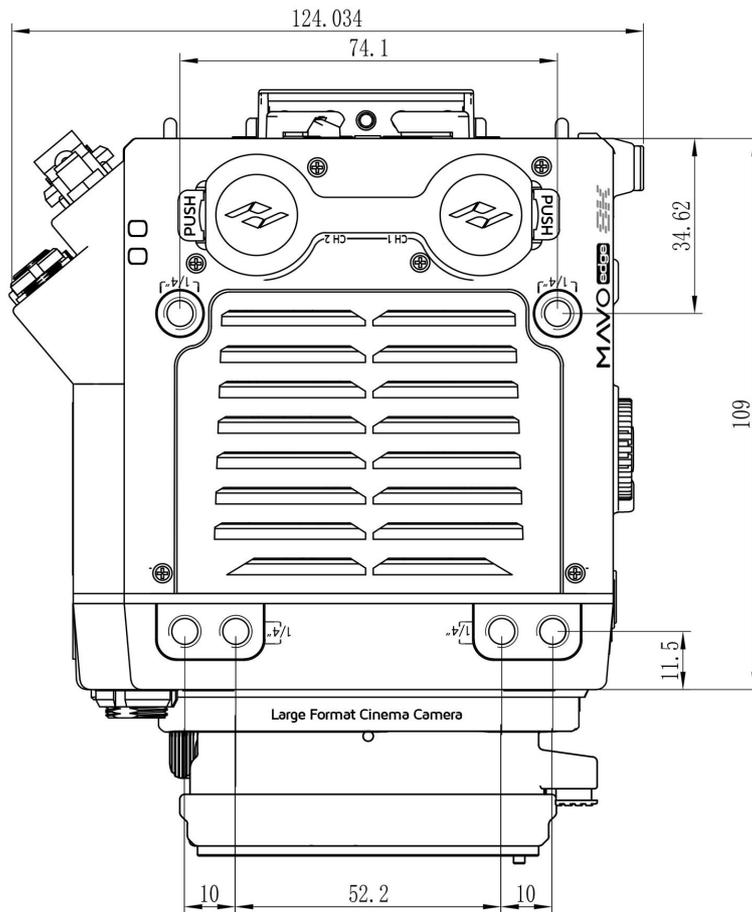

4.3.3 MAVO Edge 8K Body with KineMOUNT and E Mounting Adapter


Front View

Dimensions are shown in mm.

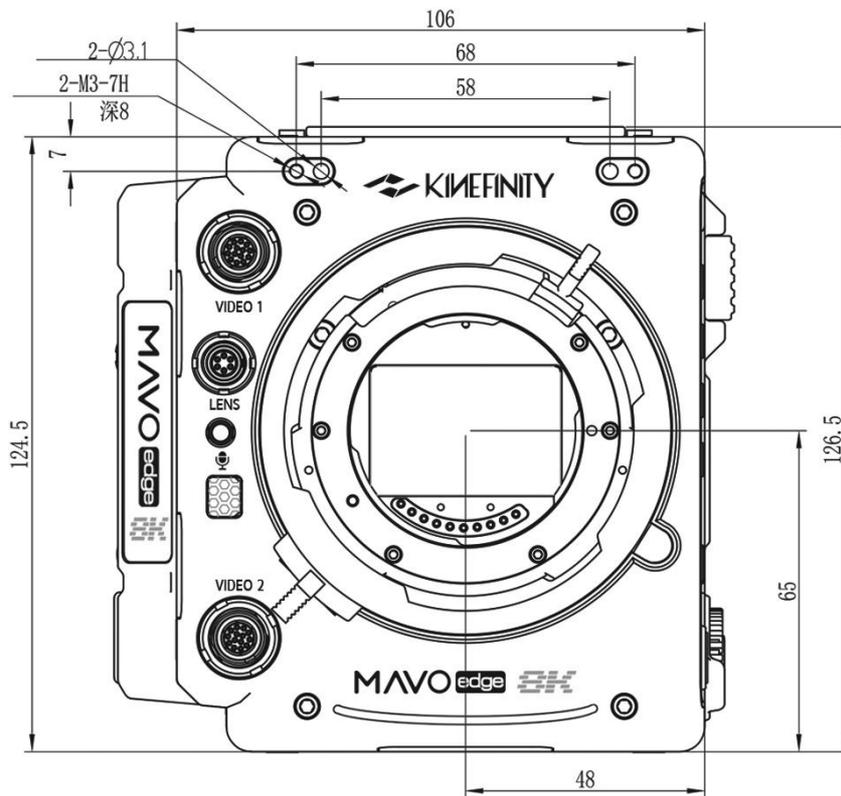


Top View

Dimensions are shown in mm.

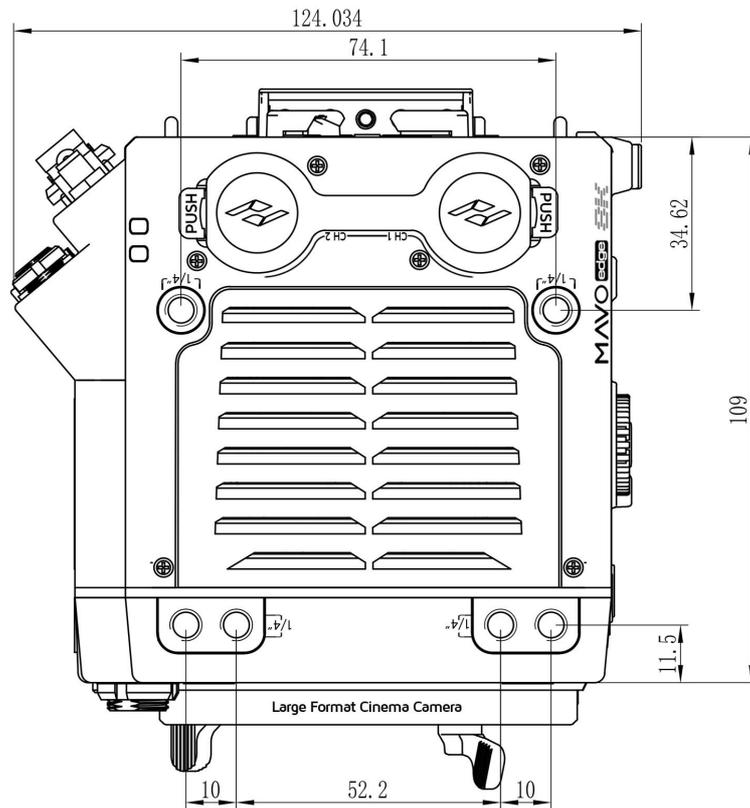

Bottom View


Dimensions are shown in mm.

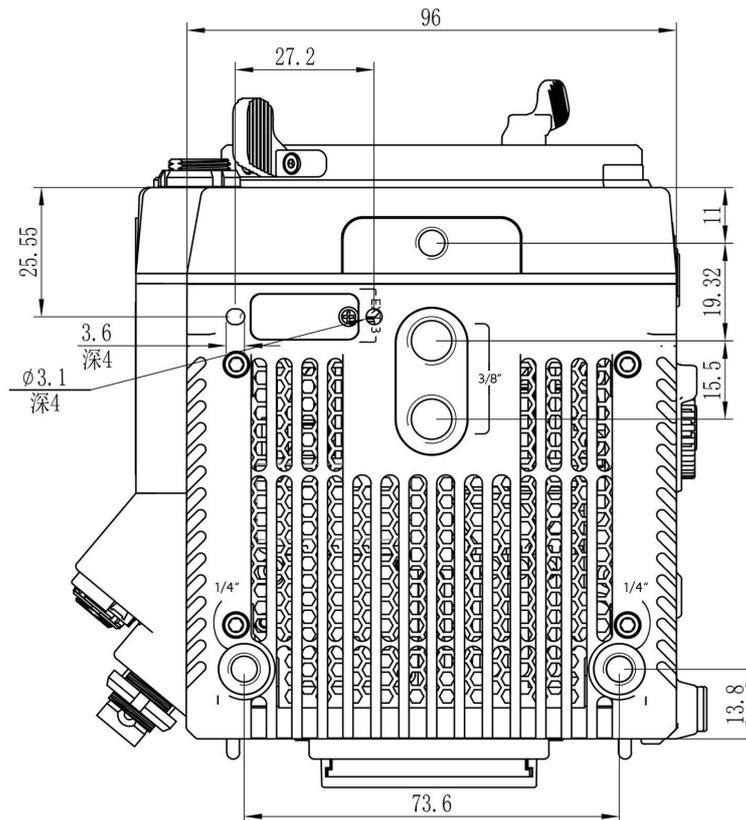

4.3.4 MAVO Edge 8K Body with KineMOUNT and PL Mounting Adapter


Front View

Dimensions are shown in mm.

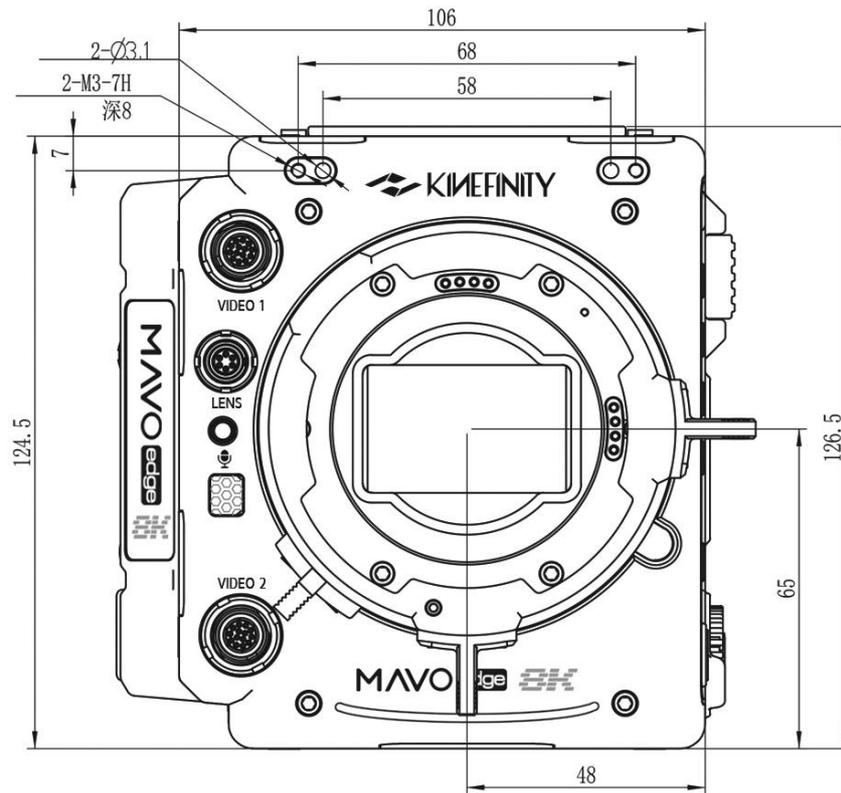

Top View

Dimensions are shown in mm.

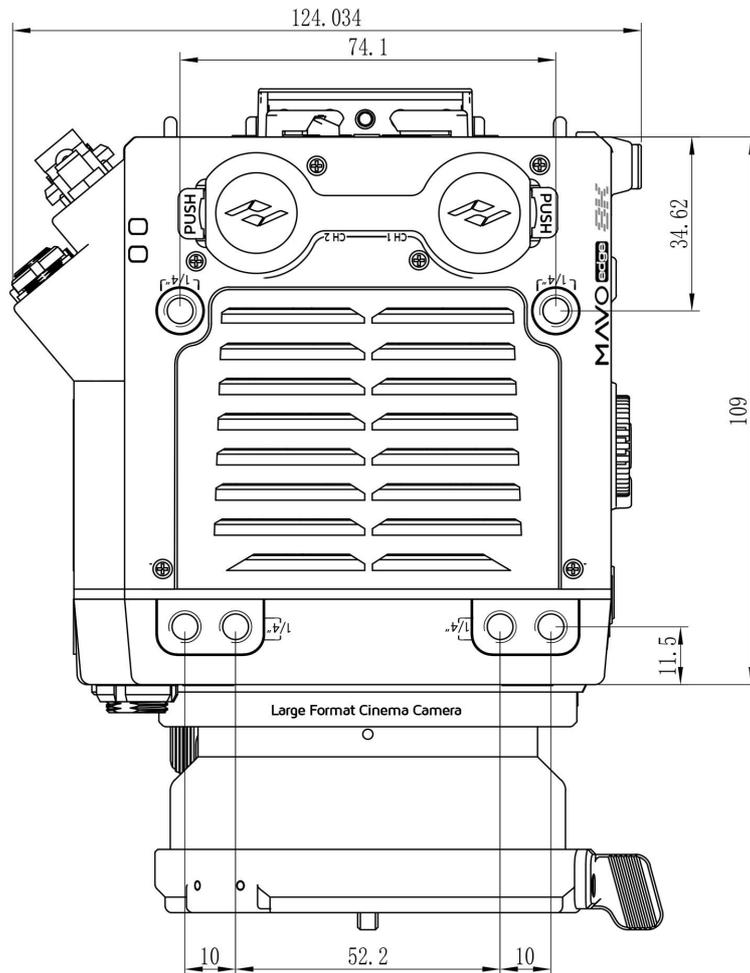

**Kinefinity Inc.**

www.kinefinity.com

Address: Bldg #1, Enji West Park, No.1, Fuwailiangjiadian, Haidian
District Beijing, 100142, China

Phone: 0086-10-51243411

Email: support@kinefinity.com, sales@kinefinity.com

Copyright 2021 Kinefinity Inc.

ALL SPECIFICATIONS SHOWN ARE PRELIMINARY AND SUBJECT TO CHANGE WITHOUT NOTICE.

MAVO LF™, KineMAG™, KineKIT™ are trademarks of Kinefinity™.